

To our customers,

---

## Old Company Name in Catalogs and Other Documents

---

On April 1<sup>st</sup>, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: <http://www.renesas.com>

April 1<sup>st</sup>, 2010  
Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (<http://www.renesas.com>)

Send any inquiries to <http://www.renesas.com/inquiry>.

## Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: “Standard”, “High Quality”, and “Specific”. The recommended applications for each Renesas Electronics product depends on the product’s quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as “Specific” without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as “Specific” or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is “Standard” unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
  - “Standard”: Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
  - “High Quality”: Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
  - “Specific”: Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) “Renesas Electronics” as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) “Renesas Electronics product(s)” means any product developed or manufactured by or for Renesas Electronics.

# R0P751RLC0011RL

Outline

SH7751R Evaluation Platform

Keep safety first in your circuit designs!

1. Renesas Technology Corp. puts the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage. Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of non-flammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

1. These materials are intended as a reference to assist our customers in the selection of the Renesas Technology Corp. product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corp. or a third party.
2. Renesas Technology Corp. assumes no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
3. All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corp. without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corp. or an authorized Renesas Technology Corp. product distributor for the latest product information before purchasing a product listed herein.  
The information described here may contain technical inaccuracies or typographical errors. Renesas Technology Corp. assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors.  
Please also pay attention to information published by Renesas Technology Corp. by various means, including the Renesas Technology Corp. Semiconductor home page (<http://www.renesas.com>).
4. When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corp. assumes no responsibility for any damage, liability or other loss resulting from the information contained herein.
5. Renesas Technology Corp. semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corp. or an authorized Renesas Technology Corp. product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
6. The prior written approval of Renesas Technology Corp. is necessary to reprint or reproduce in whole or in part these materials.
7. If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination.  
Any diversion or reexport contrary to the export control laws and regulations of Japan and/ or the country of destination is prohibited.
8. Please contact Renesas Technology Corp. for further details on these materials or the products contained therein.

# IMPORTANT INFORMATION

## READ FIRST

- READ this user's manual before using this product.
- KEEP the user's manual handy for future reference.

Do not attempt to use the product until you fully understand its mechanism.

### This Product:

In this manual, this product points out the following product which Renesas Solutions Corporation manufactured. A user's user system and host machine are not included.

### Purpose of the Product:

This product is a device to support the development of a system that uses the SuperH Risc engine Family SH7751R of Renesas 32-bit RISC MCUs. It provides support for system development in both software and hardware. Be sure to use this product correctly according to said purpose of use. Please avoid using this product for other than its intended purpose of use.

### For those who use this product:

This product can only be used by those who have carefully read the user's manual and know how to use it. Use of this product requires the basic knowledge of electric circuits, logical circuits, and MCUs.

### Precautions to be Taken when Using This Product:

- (1) This product is a development supporting unit for use in your program development and evaluation stages. In mass-producing your program you have finished developing, be sure to make a judgment on your own risk that it can be put to practical use by performing integration test, evaluation, or some experiment else.
- (2) In no event shall Renesas Solutions Corporation be liable for any consequence arising from the use of this product.
- (3) Renesas Solutions Corporation strives to renovate or provide a workaround for product malfunction at some charge or without charge. However, this does not necessarily mean that Renesas Solutions Corporation guarantees the renovation or the provision under any circumstances.
- (4) This product has been developed by assuming its use for program development and evaluation in laboratories. Therefore, it does not fall under the application of Electrical Appliance and Material Safety Law and protection against electromagnetic interference when used in Japan.
- (5) Renesas cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this user's manual and on the product are therefore not all inclusive. Therefore, you must use the product safely at your own risk.
- (6) This emulator does not conform to safety standards such as UL or IEC. Be careful when you take this emulator overseas.
- (7) This product is a product used for development of a program, and an evaluation stage. It cannot include in a user's product and cannot mass-produce.
- (8) Even if it is the case where fault is in the device carried in this product, it does not exchange for the fault repair article of a device.
- (9) Operation of all CF cards cannot be guaranteed.
- (10) Connection with the apparatus of all LAN interfaces cannot be guaranteed.
- (11) When you do not use it for a long time, please pull out and keep a power supply plug from a plug socket etc. for safety.
- (12) This product is a lead free mounting product.
- (13) Generally each brand name carried in these data is each maker's trademark or registered trademark.
- (14) Near DC jack of this product becomes high temperature. Be careful of a burn.

**Limited Applications:**

This emulator product is not authorized for use in transportation, vehicular, medical (where human life is potentially at stake), aerospace, nuclear, or undersea repeater applications. Buyers of this emulator product must notify Renesas Technology Corporation, Renesas Solutions Corporation or an authorized Renesas Technology product distributor before planning to use the product in such applications.

**Improvement Policy:**

Renesas Technology Corp. (including its subsidiaries, hereafter collectively referred to as Renesas) pursues a policy of continuing improvement in design, performance, and safety of the product. Renesas reserves the right to change, wholly or partially, the specifications, design, user's manual, and other documentation at any time without notice.

**All Rights Reserved:**

1. Circuitry and other examples described herein are meant merely to indicate the characteristics and performance of Renesas' semiconductor products. Renesas assumes no responsibility for any intellectual property claims or other problems that may result from applications based on the examples described herein.
2. No license is granted by implication or otherwise under any patents or other rights of any third party or Renesas.
3. This user's manual and emulator product are copyrighted and all rights are reserved by Renesas. No part of this user's manual, all or part, may be reproduced or duplicated in any form, in hard-copy or machine-readable form, by any means available without Renesas' prior written consent.

**State Law:**

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which may vary from state to state.

**The Warranty is Void in the Following Cases:**

Renesas shall have no liability or legal responsibility for any problems caused by misuse, abuse, misapplication, neglect, improper handling, installation, repair or modifications of the product without Renesas' prior written consent or any problems caused by the user system.

**Figures:**

Some figures in this user's manual may show items different from your actual system.

\* Compact Flash™ is the registered trademark of SanDisk Corporation.

## Precautions for Safety

### Definitions of Signal Words

In both the General Information Manual and on the product itself, several icons are used to insure proper handling of this product and also to prevent injuries to you or other persons, or damage to your properties.

This chapter describes the precautions which should be taken in order to use this product safely and properly.

 
Be sure to read this chapter before using this product.




This symbol represents a warning about safety. It is used to arouse caution about a potential danger that will possibly inflict an injury on persons. To avoid a possible injury or death, please be sure to observe the safety message that follows this symbol.




**DANGER** indicates an imminently dangerous situation that will cause death or heavy wound unless it is avoided. However, there are no instances of such danger for the product presented in this manual.



 **WARNING** indicates a potentially dangerous situation that will cause death or heavy wound unless it is avoided.



 **CAUTION** indicates a potentially dangerous situation that will cause a slight injury or a medium-degree injury unless it is avoided.



**CAUTION** with no safety warning symbols attached indicates a potentially dangerous situation that will cause property damage unless it is avoided.

**NOTE** emphasizes essential information.

In addition to the five above, the following are also used as appropriate.

△ means WARNING or CAUTION.

Example:



**CAUTION AGAINST AN ELECTRIC SHOCK**

⊘ means PROHIBITION.

Example:



**DISASSEMBLY PROHIBITED**

● means A FORCIBLE ACTION.

Example:



**UNPLUG THE POWER CABLE FROM THE RECEPTACLE.**



### CAUTION

#### Warnings for AC Power Supply:



- If the attached AC power cable does not fit the receptacle, do not alter the AC power cable and do not plug it forcibly. Failure to comply may cause electric shock and/or fire.
- Use an AC power cable which complies with the safety standard of the country.
- Do not touch the plug of the AC power cable when your hands are wet. This may cause electric shock.
- This product is connected signal ground with frame ground. If your developing product is transformless (not having isolation transformer of AC power), this may cause electric shock. Also, this may give an unrepairable damage to this product and your developing one. While developing, connect AC power of the product to commercial power through isolation transformer in order to avoid these dangers.
- If other equipment is connected to the same branch circuit, care should be taken not to overload the circuit.
- If you smell a strange odor, hear an unusual sound, or see smoke coming from this product, then disconnect power immediately by unplugging the AC power cable from the outlet. Do not use this as it is because of the danger of electric shock and/or fire. In this case, contact your local distributor.
- Before setting up this product and connecting it to other devices, turn off power or remove a power cable to prevent injury or product damage.



#### Warnings to Be Taken for This Product:



- Do not disassemble or modify this product. Personal injury due to electric shock may occur if this product is disassembled and modified.
- Make sure nothing falls into the cooling fan on the top panel, especially liquids, metal objects, or anything combustible.

#### Warning for Installation:



- Do not set this product in water or areas of high humidity. Make sure that the product does not get wet. Spilling water or some other liquid into the product may cause unrepairable damage.
- Please use this product indoors.

 
#### Warning for Use Environment:



- This equipment is to be used in an environment with a maximum ambient temperature of 35°C. Care should be taken that this temperature is not exceeded.

**CAUTION****Note on Connecting the Power Supply:**

- Do not use any power cable other than the one that is included with the product.
- At the time of connection with installation of this product or other equipments, please extract an AC/DC adaptor from a plug socket and prevent an injury and an accident.
- Pay attention to the polarities of the power supply. If its positive and negative poles are connected in reverse, the internal circuit may be broken.

**Power supply injection :**

- Once the power is turned off, wait for about 10 seconds before turning it back on again.

**Cautions to Be Taken for Handling This Product:**

- Handle the product with caution, taking care not to apply strong mechanical shock to the product by dropping or letting it fall down.
- Do not touch the communication interface connector pins or other connector pins directly with your hand. Static electricity from your body may break down the internal circuit of the product.
- Do not pull the product by the cable connecting to a board in it. Do not hold down a board while you pull the other end of it. The cable may break.

## Contents

1.	Outline.....	10
1.1.	Package Components .....	10
1.2.	System Configuration .....	11
1.2.1.	System Configuration .....	11
1.2.2.	Names and Functions of each part of the System .....	12
1.3.	Setup Method (Up to Boot loader starting) .....	13
1.4.	Specification List.....	14
1.5.	Address Map.....	16
2.	Functional Specification.....	17
2.1.	Power Supply Specification .....	17
2.1.1.	DC Jack Input Power Supply .....	18
2.2.	Switches Specification .....	18
2.2.1.	DIP Switch for CPU Mode Setup .....	18
2.2.2.	DIP Switch for Debugging.....	19
2.2.3.	Power On Switch .....	19
2.2.4.	Switch for System Reset.....	19
2.2.5.	Switch for Manual Reset.....	20
2.2.6.	DIP Switch for Maintenance .....	20
2.3.	LED Specification .....	21
2.3.1.	LED for the SH7751R status .....	21
2.3.2.	LED for the Ethernet Hub .....	21
2.3.3.	LED for the CF Card.....	21
2.3.4.	LED for the USB Hub.....	21
2.3.5.	LED for Power Supply .....	21
2.3.6.	LED for Debugging .....	21
2.4.	JTAG Emulator Interface.....	22
2.5.	Memories .....	22
2.5.1.	An Access Timing Setup to Each Device Connected to SH Bus .....	22
2.6.	PCI Devices .....	23
2.6.1.	PCI Card Slot.....	23
2.6.2.	CardBus Card Connector .....	23
2.6.3.	LAN Connector .....	23
2.6.3.1.	MAC Address Assignment.....	23
2.7.	2D Graphic Controller Interface .....	24
2.7.1.	CRT Connector.....	24
2.7.2.	LCD Connector .....	25
2.7.3.	LCD Back Light Connector .....	26
2.7.4.	USB Connector.....	26
2.7.5.	SM501 Extention Connector.....	27
2.8.	Touch Panel Connector .....	28
2.9.	SH Bus Extention Connector.....	29
2.10.	Serial Connector .....	36
2.11.	CF Card Connector.....	36
2.12.	FROM Board Connector .....	37
2.13.	Real Time Clock .....	39
2.14.	Serial Interface (Internal FPGA) .....	39
2.15.	Reset Signal .....	40
2.15.1.	Power On Reset .....	40
2.15.2.	System Reset .....	41
2.15.3.	Manual Reset.....	41
2.15.4.	CF Card Reset.....	41
3.	FPGA Logic Function Specification .....	42
3.1.	Pin Function.....	42
3.2.	Register Map .....	47
4.	Extension Board Specification.....	48
4.1.	About the extension board size .....	48
4.2.	The allowable current of add-in board and PCI card.....	49

---

4.2.1.	The allowable current of add-in board .....	49
4.2.2.	The allowable current of PCI board .....	49
5.	Boot Loader Specification.....	50
5.1.	Boot Loader Functional List.....	50
6.	Linux Kernel Download .....	51

# 1. Outline

## 1.1. Package Components

This product is constituted by the following board and parts. When opened, please check whether it has gathered altogether.

Table 1.1.1 The contents list of packing

Item	Description	Quantity
R0P751RLC0011RL	SH7751R Platform	1
FROM Board (Bus width is 32bit 64M Byte)	Within boot loader	1
AC Adapter	DC12.0V 5.0A	1
CD-ROM	User's manual , Sample program etc.	1

\* If there is any question or doubt about the packaged product, contact your local distributor.

## 1.2. System Configuration

### 1.2.1. System Configuration

Figure 1.2.1 shows the system configuration.

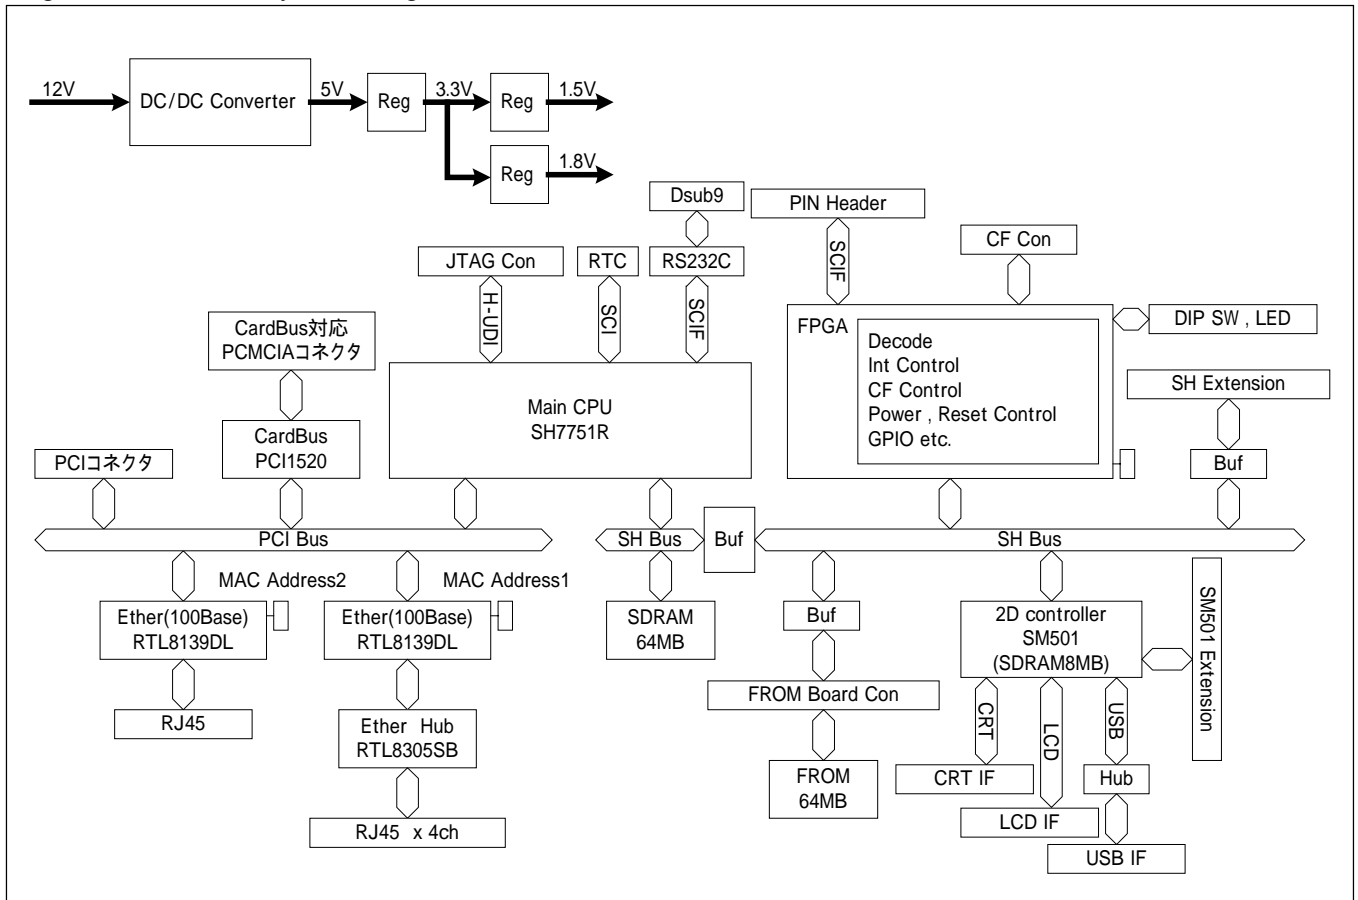


Figure 1.2.1 R0P751RLC0011RL system configuration

1.2.2. Names and Functions of each part of the System

Figure 1.2.2 shows the names of parts reference.

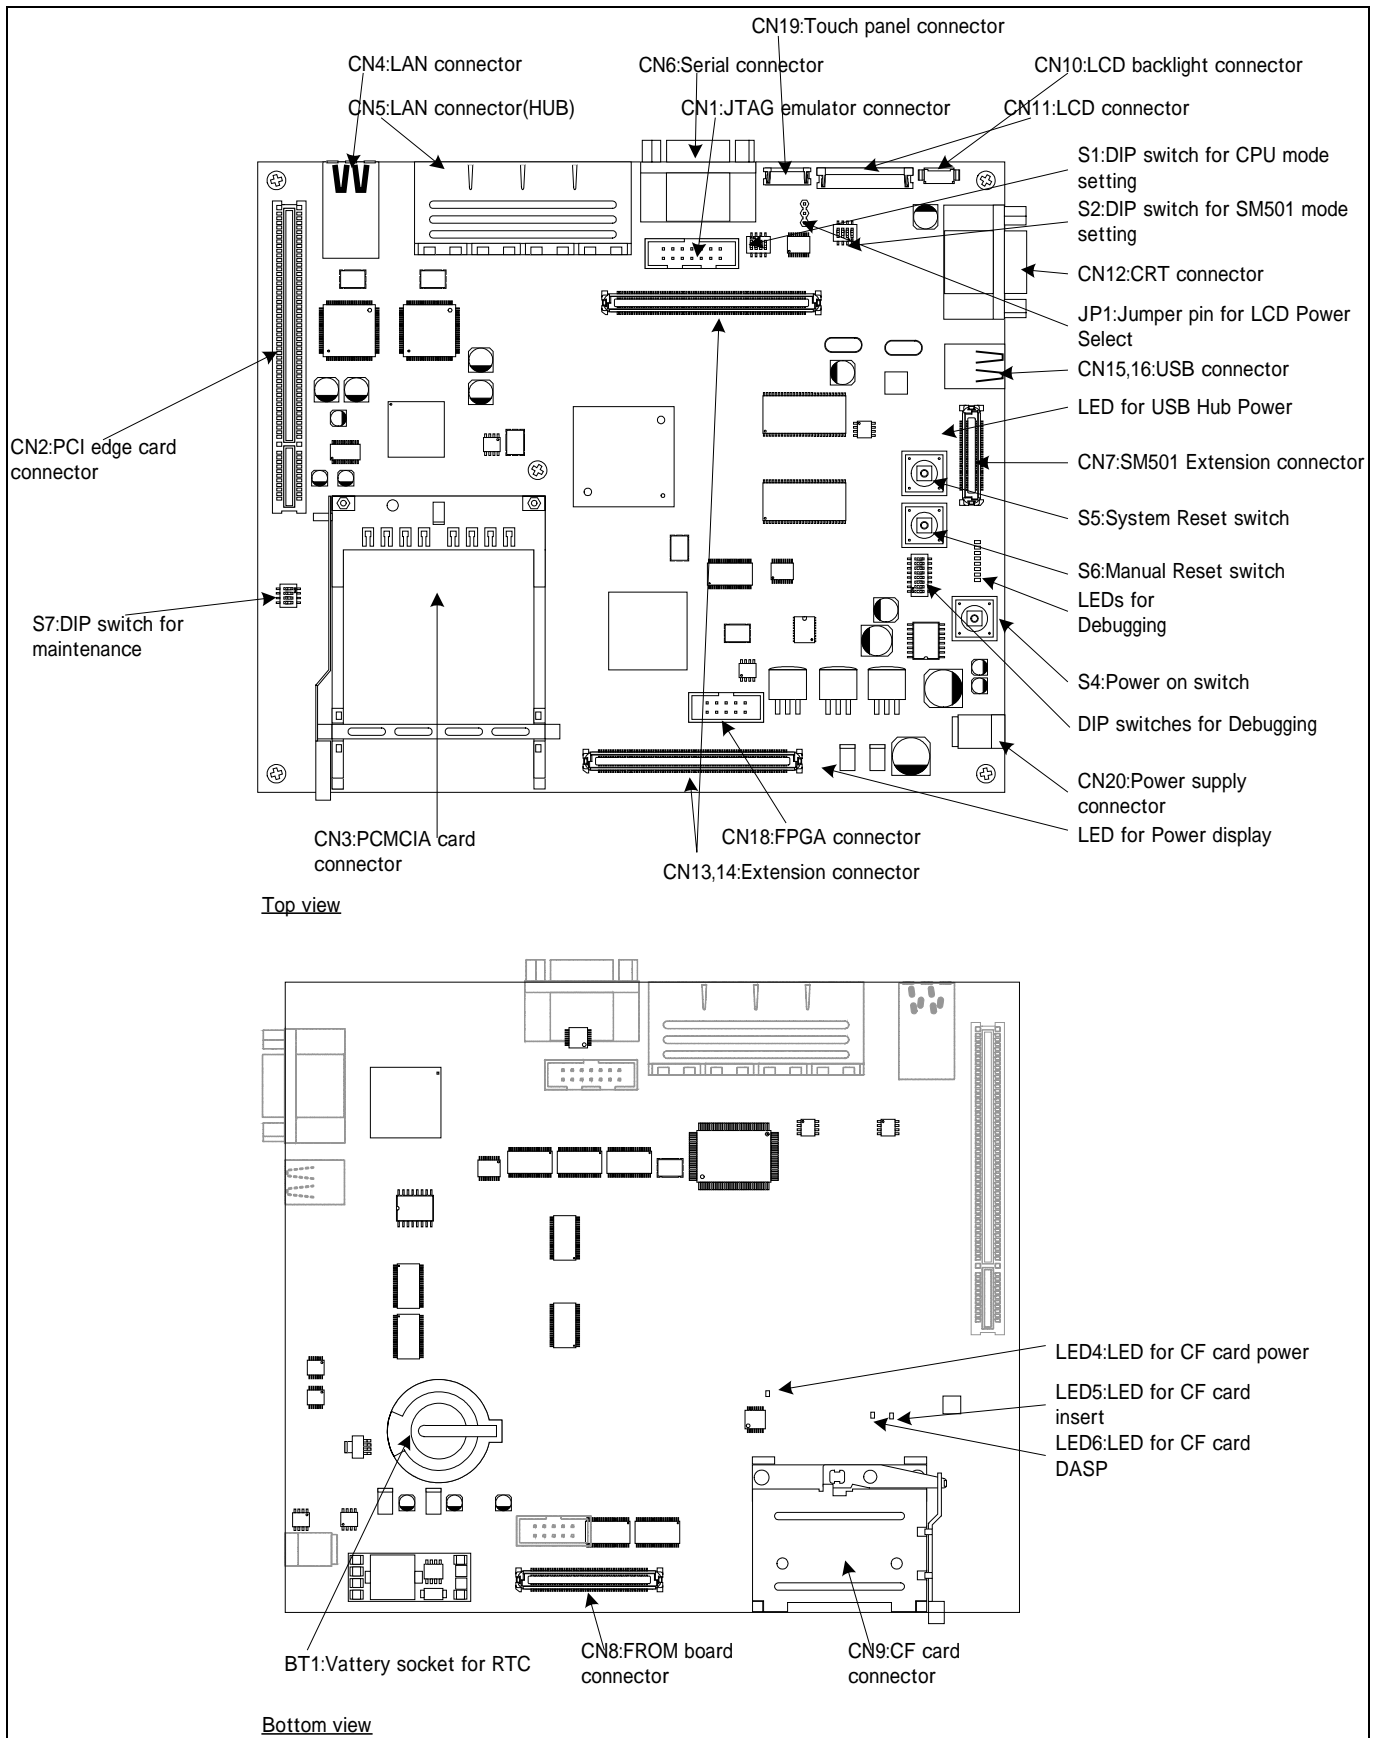


Figure 1.2.2 Name of R0P751RLC0011RL's parts reference

### 1.3. Setup Method (Up to Boot loader starting)

Figure 1.3.1 shows the setting up this system. Please prepare the follows:

- Console PC
- RS232C cross cable

Please prepare CF card, a CRT monitor, network environment, etc. if needed.

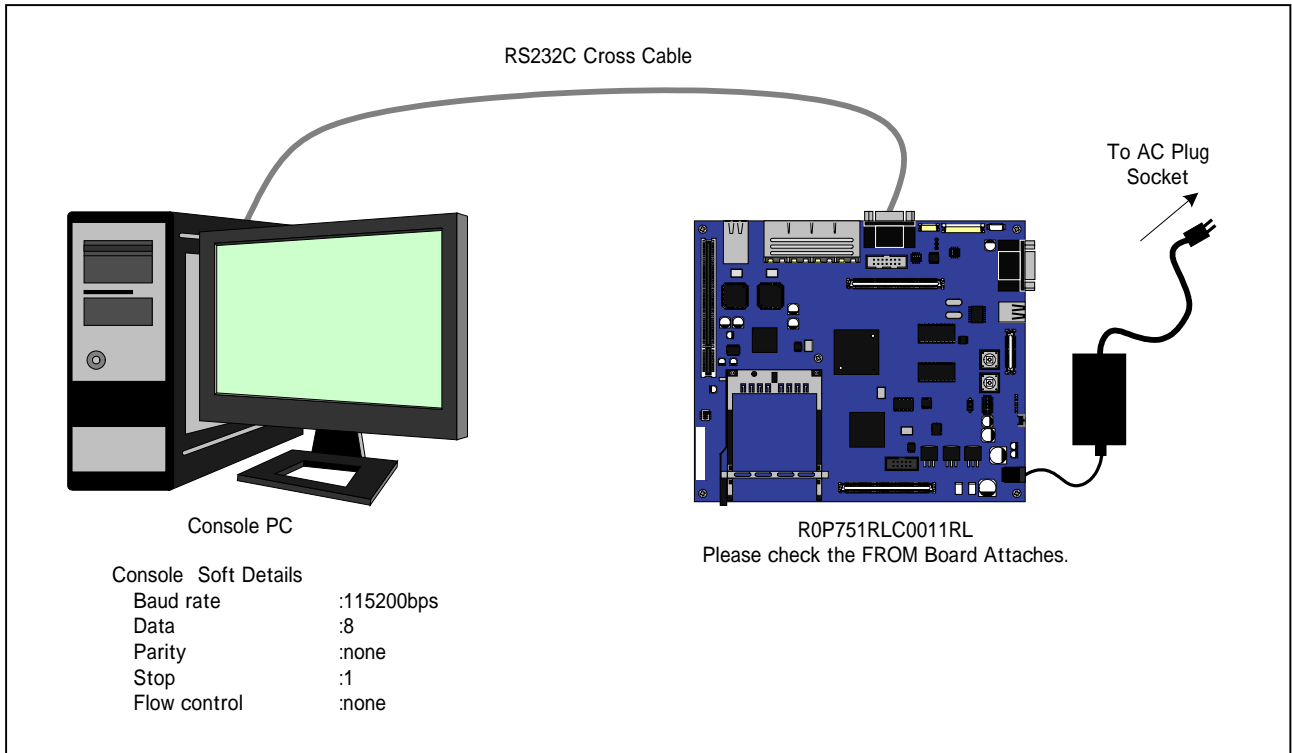


Figure 1.3.1 Set Up this system

(1) Please attach the FROM board in CN8 mounted in the solder side of R0P751RLC0011RL. (Be careful of poor contact.)

	<b>CAUTION</b>
Where the power supply of this product is intercepted, please be sure to make connection of a FROM board. Moreover, be careful of poor contact of a FROM board. The mistaken usage leads to destruction of this product.	

(2) Connect the terminal for consoles with this board with a RS232C cross cable.

(3) Start terminal software on the terminal for consoles.

(baudrate:115200bps, data:8bit, parity:none, stop bit:1bit, flow control:none)

(4) Insert an attached AC/DC adaptor in CN20, and connect with a plug socket.

(5) If S4 of R0P751RLC0011RL is pushed, a power supply injection will be carried out. (Red button)

	<b>CAUTION</b>
If S4 is pushed again, power supply interception is possible. However, while using CF card, please carry out power supply interception processing in carried FPGA. When S4 is pushed during CF card operation and power supply interception is performed, there is possibility of destruction of CF card. Please refer to the clause of FPGA functional explanation about the specification of FPGA.	

### 1.4. Specification List

Table 1.4.1 shows a list of specifications.

Table 1.4.1 R0P751RLC0011RL Specifications

Item	Description
CPU	HD6417751RBP240V (Renesas Technorogy) <ul style="list-style-type: none"> <li>• Input Clock: 20MHz</li> <li>• CPU Clock(I): 240MHz (Mode 5)</li> <li>• Bus Clock(B): 120MHz (Mode 5)</li> <li>• Peripheral Clock(P): 60MHz (Mode 5)</li> <li>• PCI Bus: 33MHz (4ch)</li> <li>• Package: 256pins BGA (1.27mm pitch)</li> </ul>
Memory	FROM board:S29PL127J60TF1130 (Spansion) <ul style="list-style-type: none"> <li>• FROM:64M Byte • 32bit Bus Access</li> </ul>
	EDS2516ADTA-75E (Elpida memory) <ul style="list-style-type: none"> <li>• SDRAM:64MB</li> <li>• 32bit Bus Access</li> </ul>
FPGA	EP1C4F400C8N (ALTERA) <ul style="list-style-type: none"> <li>• Address Decode ,Interrupt control ,CF control etc.</li> </ul> Configuration ROM: EPCS4SI8N
2D Graphic Controller	SM501GX08LF00-AB (Silicon Motion)
LAN Controller	RTL8139DL-LF (Realtek) LAN Connector: LU1S041C-43-LF(BOTHHAND)
LAN Hub Controller	RTL8305SB-VD-LF (Realtek) LAN Connector:0810-1X4T-36-F(BelFuse)
CardBus Controller	PCI1520ZHK (Texas Instruments)
Real Time Clock	RTC-9701JE(Epson Toyocom) <ul style="list-style-type: none"> <li>• Uses SH7751R's SCI</li> </ul>
LED	<ul style="list-style-type: none"> <li>• for Debugging (8):Control FPGA register</li> <li>• for Status (6)</li> </ul>
Switch	<ul style="list-style-type: none"> <li>• for Power ON (x 1)</li> <li>• for RESET (x 2)</li> <li>• for Debugging (8bit x 1)</li> <li>• for Mode setting (4bit x 2)</li> </ul>
Compact Flash Card Connector	Header: ICM-MA2H-SS52-N11B(LF)(SN) (JST) Ejector: ICME-CB68L5-302N (JST)
PCMCIA Card Connector	Header: ICM-CB68H-S112-502N(LF)(SN) (JST) Ejector:ICM-MAE-R32 (JST)
Serial Connector	RS232C Connector:JEY- 9P-1A2B (JST) SH7751R's SCIF
Connectors	SH Bus Extension connector: 52837-1679 (Molex)
	FROM board connector:52837-1079 (Molex)
	SM501 Extension connector:52837-0679 (Molex)
	USB connector:XM7A-0442-A (Omron)
	CRT connector:XM4L-1542-132 (Omron)
	LCD connector:40FLH-SM1-TB(LF)(SN) (JST)
	LCD backlight connector:53261-0590 (Molex)
	Touchpanel interface connector: 14FLH-SM1-TB (LF)(SN) (JST)
	SH7751R JTAG Emulator connector (14pins) XG4C-1031 (Omron)
	EPCS4SI8N connector (10pins) XG4C-1431 (Omron)

Item	Description
Power IN	2.1mmSocket Center Plus • From AC/DC Adapter
Size	• Size: 170mm × 200mm
Operating temperature	5 to 35°C (no dew)
Storage temperature	-10 to 60°C (no dew)

### 1.5. Address Map

Figure 1.5.1 shows Address Map. Please refer to the clause of FPGA functional explanation about the specification of FPGA.

H 0000_0000 H 03FF_FFFF	Area0	32bit	FROM Area (64MB)
H 0400_0000 H 0400_004F H 0400_0050	Area1	16bit	FPGA Area (80B)
H 07FF_FFFF			Disable Area (FPGA Shadow)
H 0800_0000 H 0BFF_FFFF	Area2	8/16/32 bit	Extension Area (64MB)
H 0C00_0000 H 0FFF_FFFF	Area3	32bit	SDRAM Area (64MB)
H 1000_0000 H 13FF_FFFF	Area4	32bit	SM501GX08LF00 Area
H 1400_0000 H 17FF_FFFF	Area5	16bit	Compact FLASH Area (64MB)
H 1800_0000 H 1BFF_FFFF	Area6	8/16/32 bit	Extension Area (64MB)

Figure 1.5.1 SH7751R Address Map

## 2. Functional Specification

### 2.1. Power Supply Specification

This board operates by supply of 12V from an attached AC/DC adaptor.

A power supply system figure is shown in Fig. 2.1.1

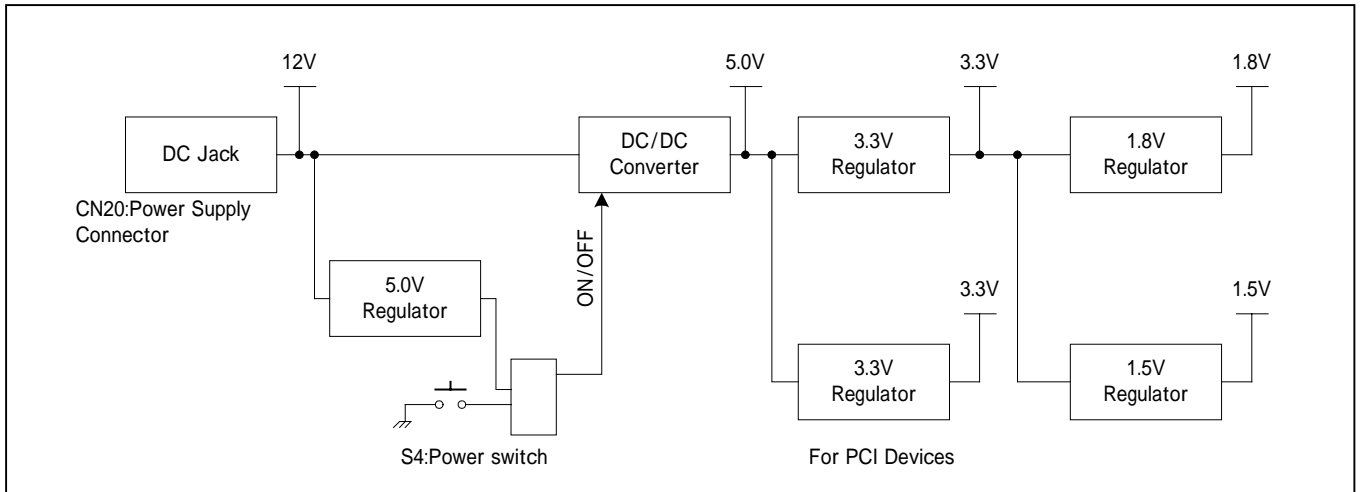


Figure 2.1.1 power-supply system figure

Each voltage is used by the following blocks. The main power supply use blocks are shown in Table 2.1.1.


Table 2.1.1 The main power supply use blocks

Voltage	Use place	Note
12V	PCI connector	
	PCMCIA connector	
	Inverter for LCD	
	The connector for extension	
5.0V	Standby power	
	PCI connector	
	PCMCIA connector	
	LAN controller	RTL8139DL
	USB Hub controller	
3.3V	拡張connector	
	PCI connector	
	PCMCIA connector	
	SH7751R	HD6417751RBP240
	FROM	S29PL127J60TFI130
	SDRAM	EDS2516ADTA
	FPGA	EP1C4F400C8N
	SM501	SM501GX08LF00
	CF card connector	
	CardBus card controller	PCI1520ZHK
	LAN controller	RTL8139DL
	LAN Hub controller	RTL8305SB
The connector for extension		
1.8V	SM501 core power	SM501GX08LF00
1.5V	SH7751R core power	HD6417751RBP240
	FPGA core power	EP1C4F400C8N


### 2.1.1. DC Jack Input Power Supply

The input power supply specification from DC jack of this board is shown. Please choose the power supply which suits the specification shown in Table 2.1.2 in the case of use of except for an attached AC/DC adaptor.

Table 2.1.2 DC jack input specification.

Item	Specification
Plug	2.5mm
Plug Polarity	Outside: Minus, inner side:Plus. 
Input voltage	12.0V
Supply current	More than 5.0A

	<b>CAUTION</b>
Keep in mind that near DC jack becomes high temperature very much at the time of this product operation.	

	<b>WARNING</b>
When an AC/DC adaptor with the reverse polarity of a plug is used, it leads to destruction of this product. Moreover, keep in mind that there is possibility of emitting smoke and ignition.	

## 2.2. Switches Specification

Three push switches and three DIP switches are mounted in this board.

### 2.2.1. DIP Switch for CPU Mode Setup

S1 is the DIP switch for a mode setup of operation of SH7751R. The clock mode and the endian of SH7751R are specified. The S1 specification is shown in Table 2.2.1 and the S1 appearance figure is shown in Fig. 2.2.1. It is in a shading state at the time of shipment, it was made into the clock mode 5 (internal:240MHz, external bus:120MHz, circumference module:60MHz), and is set as a little endian.

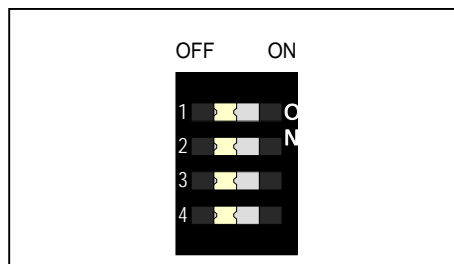


Figure 2.2.1 S1 appearance figure

Table 2.2.1 S1 specification.

Switch	Connection terminal	ON	OFF	Function
S1-1	SH7751R_MD0	H	L	A setup of an clock mode
S1-2	SH7751R_MD1	H	L	
S1-3	SH7751R_MD2	H	L	
S1-4	SH7751R_MD5	H	L	A setup of an endian L:Big endian H:Little endian

2.2.2. DIP Switch for Debugging

S3 is a DIP switch for debugging. It can connect with FPGA and can refer to by the dedicated register. It can be used of a user. Please refer to the clause of FPGA functional explanation about the specification of FPGA. The S3 appearance figure is shown in Table 2.2.2 and the S3 specification is shown in Fig. 2.2.2.

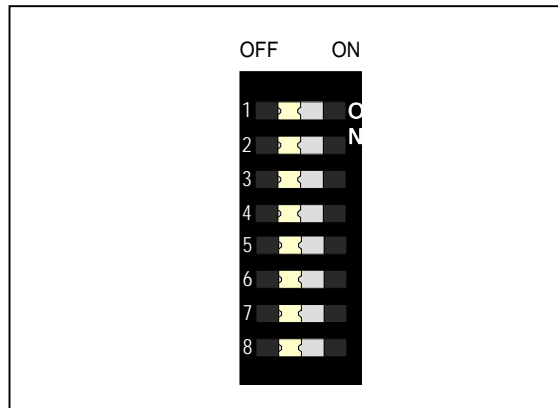


Figure 2.2.2 S3 appearance figure.

Table 2.2.2 S3 specification.

Switch	Connection terminal	ON	OFF	Function
S3-1	FPGA	H	L	Reference is possible at FPGA
S3-2	FPGA	H	L	
S3-3	FPGA	H	L	
S3-4	FPGA	H	L	
S3-5	FPGA	H	L	
S3-6	FPGA	H	L	
S3-7	FPGA	H	L	
S3-8	FPGA	H	L	

2.2.3. Power On Switch

S4 is a power supply switch. Key-top is "red". After inserting an attached AC/DC adaptor in CN20, a power supply is supplied to this board under switch-pushing. A power supply is again intercepted under S4 switch-pushing at the time of this board operation.

	CAUTION
The method of power supply interception is controllable by "S4 switch-pushing" or the control from FPGA. When you perform sudden power supply interception by S4, since the data of CF card etc. may be destroyed, please perform power supply interception by the control from FPGA. Please refer to the clause of FPGA functional explanation about the specification of FPGA.	

2.2.4. Switch for System Reset

S5 is a system-reset switch. A key-top is "white". A reset pulse is generated to this timing in each device under S5 switch-pushing. The explanation about a reset signal is indicated to "2.15 Reset signal".

2.2.5. Switch for Manual Reset

S6 is a manual reset switch. A key-top is “blue”. Manual reset is inputted into SH7751R under S6 swich-pushing. There is no input to other devices. The explanation about a reset signal is indicated to “2.15 Reset signal”.

2.2.6. DIP Switch for Maintenance

S7 is a DIP switch for a maintenance setup. Moreover, the bus width of FROM at the time of starting is also set up by ON/OFF of bit4.

It can connect with FPGA and can refer to by the dedicated register. Please refer to the clause of FPGA functional explanation about the specification of FPGA. An attached FROM board is connected, and if bit1 is set as “ON” and started, it will start in maintenance mode.

By starting in maintenance mode, use of boot loader update and test mode is attained.

Please refer to the clause of boot loader functional explanation about the specification in boot loader update and test mode.

The S7 specification is shown in Table 2.2.6 and the S7 appearance figure is shown in Fig. 2.2.6. It is in a shading state at the time of shipment, and it is set as normal mode starting and a bus width of 32 bits.

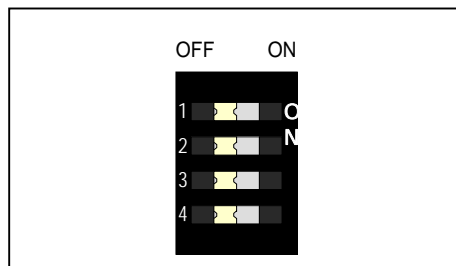


Figure 2.2.6 S7 appearance figure

Table 2.2.6 S7 specification

Switch	Connection terminal	ON	OFF	Function
S7-1	FPGA	H	L	Boot loader mode
S7-2	FPGA	H	L	Reservation
S7-3	FPGA	H	L	Reservation
S7-4	SH7751R_MD3	H	L	Area 0 bus width is specified 0 : 16bit / 1 : 32bit

## 2.3. LED Specification

### 2.3.1. LED for the SH7751R status

LED1 is LED for a status display of SH7751R. It has connected with STATUS1, and STATUS0 of SH7751R ports. Functional assignment of LED is shown in Table 2.3.1.

Table 2.3.1 LED functional assignment.

LED	Function	Status
LED1	Reset	Lighting off
	Sleep	Green lighting
	Standby	Red lighting
	Nomal	Orange lighting

### 2.3.2. LED for the Ethernet Hub

LED2 and LED3 are connected to LED\_ACT4, and LED\_SPD4 of RTL8305SB. A function changes with setup of RTL8305SB. Please refer to the data of RTL8305SB about the details of the usage.

### 2.3.3. LED for the CF Card

LED4, LED5, and LED 6 are LED for CF cards. It is automatically controlled by CF card insertion. LED functional assignment is shown in Table 2.3.2.

Table 2.3.2 LED functional assignment

LED	Function	Status
LED4	At the time of the power supply to CF card	Lighting
LED5	At the time of CF card insertion	Lighting
LED6	At the time of CF_DASP mode	Lighting

### 2.3.4. LED for the USB Hub

LED7 and LED8 are connected to a USB Hub controller. If a power supply is supplied to each USB connector, it will light up.LED functional assignment is shown in Table 2.3.3.

Table 2.3.3 LED functional assignment

LED	Function	Status
LED7	It is power supply supply to USB Hub No.1	Lighting
LED8	It is power supply supply to USB Hub No.2	Lighting

### 2.3.5. LED for Power Supply

LED17 is LED for a power supply display. If a power supply is supplied to this board, it will light up.

### 2.3.6. LED for Debugging

LED9 to LED16 are LED for debugging. It is controllable by FPGA. Please refer to the clause of FPGA functional explanation about the specification of FPGA.

## 2.4. JTAG Emulator Interface

CN1 is a connector for JTAG emulator. The emulator which used the H-UDI interface of SH7751R is connected. Please use it, connecting the emulator corresponding to H-UDI made from Renesas Technology Corp.

The general-view figure of a JTAG emulator connector is shown in Fig. 2.4.1, and signal arrangement is shown in Table 2.4.1.

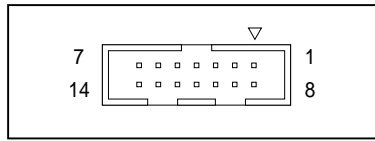


Figure 2.4.1 Appearance figure of JTAG emulator connector

Table 2.4.1 Signal arrangement of JTAG emulator connector

Pin number	Signal name
1	TCK
2	TRST#
3	TDO
4	ASEBRK#
5	TMS
6	TDI
7	RESET#
8	GND
9	GND
10	GND
11	NC
12	GND
13	GND
14	GND

## 2.5. Memories

The list of the memory carried in this product is shown in Table 2.5.1.

Table 2.5.1 memory list

Classification	Start address	Size	Bus width	Note
External FROM	H'0000_0000	64MB	32bit	At the time of mounting of an enclosed FROM board
External SDRAM	H'0C00_0000	64MB	32bit	

### 2.5.1. An Access Timing Setup to Each Device Connected to SH Bus

The timing specification of each device linked to the SH7751R local bus of this board is shown in Table 2.5.2.

(STATUS: Input clock is 20MHz and CPU mode is mode5)

Table 2.5.2 The timing specification of each device

Area	Classification	Product name	Bus width	Timing specifications
0	FROM Board	S29PL127J60TFI130	32	The number of soft waits: 9
1	FPGA	EP1C4F400C8N	16	The number of soft waits: 3
3	SDRAM	EDS2516ADTA-75-E	32	CAS latency: 3
4	2DGraphic controller	SM501GX08LF00-AB	32	The number of soft waits: 9
5	CF card	CF card	16	The number of SH7751R soft waits: 12 The CFCTL register of FPGA also needs to be set up.

## 2.6. PCI Devices

With this board, one PCI connector, one CardBus card controller, and two LAN controllers are connected to the PCI bus of SH7751R. One of two LAN controllers connects a Hub controller, and it has 4 ports.

Each device number (DEVNO) is shown in Table 2.6.1. A device number is a number of a device set as the object of configuration access.

Table 2.6.1 device number list

DEVNO	Device	Function	Interruption
H'0	PCI card connector	all-purpose PCI card	PCI_INTA
H'1	RTL8139DL (with RTL8305SB)	Ethernet 10/100Base (with Ethernet Hub)	PCI_INTB
H'2	PCI1520ZHK	PCI – CardBus bridge	PCI_INTC
H'3	RTL8139DL	Ethernet 10/100Base	PCI_INTD

### 2.6.1. PCI Card Slot

CN2 is a PCI card connector. It has connected with the PCI bus of SH7751R.



### CAUTION

Although the connector based on PCI 5V card specification is mounted, a PCI bus signal should use the card of 3.3V signal specification for the specification of SH7751R. If 5V signal is supplied to SH7751R, there is a possibility of destroying SH7751R.

### 2.6.2. CardBus Card Connector

CN3 is a CardBus card controller, PCI1520ZHK (made from Texas Instruments) is connected to the PCI bus of SH7751R. This controller supports the PC card and 3.3V CardBus card of 5V/3.3V mixture. Please refer to the data of PCI1520ZHK about the details of the usage.

### 2.6.3. LAN Connector

This board -- as an Ethernet controller -- the product made from REALTEK -- two RTL8139DL(s) are mounted . Please refer to the data of RTL8139DL about the details of the usage. Moreover, RTL8139DL arranged for the device number 1 is connected to Hub controller RTL8305SB. A Hub-controller (RTL8305SB) supports 4 ports.

#### 2.6.3.1. MAC Address Assignment

The MAC Address is written in external EEPROM of RTL8139DL. Please refer to MAC1 and MAC2 on the solder side of this product.

MAC1 is supported the device number 1 and MAC2 is supported the device number 3.

## 2.7. 2D Graphic Controller Interface

This board -- as 2D graphic controller -- Silicon Motion Inc. make -- SM501GX08LF00-AB is mounted. It has connected with SH bus. About the "RDY" signal to SH7751R, timing adjustment is carried out in FPGA. Please refer to the data of SM501GX08LF00-AB about the details of the usage.



### CAUTION

HCLK supplied to SM501GX about this product is use limitation in a laboratory, and Silicon Motion Inc. consents to operation by a maximum of 120MHz. In the adoption to a user's product, please perform a sufficient examination and sufficient evaluation.

### 2.7.1. CRT Connector

CN12 is a connector for CRT connection. It has connected with the CRT output terminal of SM501. Signal arrangement of the connector for CRT interfaces is shown in Table 2.7.1.

Table 2.7.1 Signal arrangement of connector for CRT interfaces

Pin number	Signal name
1	R
2	G
3	B
4	NC
5	GND
6	GND
7	GND
8	GND
9	NC
10	GND
11	NC
12	NC
13	CRTHS
14	CRTVS
15	NC

2.7.2. LCD Connector

CN11 is a connector for LCD interfaces. It has connected with the LCD output terminal of SM501. Please use it according to the specification of LCD which the user adopted. The supply voltage of LCD can be chosen in JP1. The connectors currently used are 40 FLH-SM1-TB (LF), and (SN) (made from the J.S.T. Mfg Co.,Ltd) The appearance figure of the connector for LCD interfaces is shown in Fig. 2.7.2, and signal arrangement is shown in Table 2.7.2.

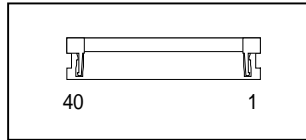


Figure 2.7.2 Connector appearance figure for LCD interfaces

Table 2.7.2 Signal arrangement of connector for LCD interfaces

Pin number	Signal name	Note
1	GND	
2	CK	Clock signal
3	GND	
4	HSYNC	Horizontal Synchronizing signal
5	GND	
6	VSYNC	Vertical Synchronizing signal
7	GND	
8	R0	Red data
9	R1	
10	R2	
11	R3	
12	R4	
13	R5	
14	GND	
15	G0	Green data
16	G1	
17	G2	
18	G3	
19	G4	
20	G5	
21	GND	
22	B0	Blue data
23	B1	
24	B2	
25	B3	
26	B4	
27	B5	
28	GND	
29	FPEN	LCD enable
30	GND	
31	GND	
32	NC	
33	NC	
34	VCC	3.3V/5.0V change is possible at J1. 1-2 short-circuit: 3.3V 2-3 short-circuit: 5.0V It is 3.3V setup at the time of shipment.
35	VCC	
36	VCC	
37	VCC	
38	VCC	
39	VCC	
40	VCC	

### 2.7.3. LCD Back Light Connector

CN10 is a connector for LCD inverter connection. The appearance figure of the connector for LCD inverter connection is shown in Fig. 2.7.3, and signal arrangement of the connector for LCD inverter connection is shown in Table 2.7.3. The connector currently used is the product 53261-0571 made from Molex. Conformity housing is 51021-0500.

 


Figure 2.7.3 Connector appearance figure for LCD inverter connection

Table 2.7.2 Signal arrangement of connector for LCD inverter connection

Pin number	Signal name	Note
1	VCC	12.0V
2	GND	
3	VRMT	Inverter ON/OFF
4	VR0	Brightness (however, short at 20Kohm).
5	VR1	

### 2.7.4. USB Connector

CN15 and CN16 are the connectors for USB connection. The USB terminal of SM501 is connected to LSI for USB Hub, and 2ch mounting is carried out. It is based on USB1.1.

### 2.7.5. SM501 Extention Connector

CN17 has connected the signal of I2C of SM501 and a ZV port, and AC97 and UART. The connector has not mounted. Please prepare of a user if needed. An assumption connector is the product 52837-0679 made from Molex. Signal arrangement is shown in Table 2.7.5.

Table 2.7.5 Signal arrangement of SM501 extension interface connector

Pin number	Signal name	Note	Pin number	Signal name	Note
1	5.0V		31	GPIO59	ZV port
2	5.0V		32	GPIO29	
3	5.0V		33	GPIO60	ZV port
4	5.0V		34	GPIO37	UART
5	GND		35	GPIO61	ZV port
6	GND		36	GND	
7	GPIO16	ZV port	37	GPIO62	ZV port
8	GND		38	GND	
9	GPIO17	ZV port	39	GPIO63	ZV port
10	GND		40	GND	
11	GPIO18	ZV port	41	GND	
12	GPIO24	AC97	42	GPIO38	UART
13	GPIO19	ZV port	43	VP_HREF	ZV port
14	GPIO25	AC97	44	GND	
15	GPIO20	ZV port	45	VP_VSYNC	ZV port
16	GPIO26	AC97	46	GND	
17	GPIO21	ZV port	47	VP_CLK	ZV port
18	GND		48	GND	
19	GPIO22	ZV port	49	GND	
20	GND		50	GPIO39	UART
21	GPIO23	ZV port	51	I2CCK	I2C
22	GND		52	GND	
23	GND		53	GND	
24	GPIO27	AC97	54	GPIO40	UART
25	GPIO56	ZV port	55	I2CDA	I2CD
26	GND		56	GND	
27	GPIO57	ZV port	57	GND	
28	GND		58	GND	
29	GPIO58	ZV port	59	12V	
30	GPIO28	AC97	60	12V	

## 2.8. Touch Panel Connector

CN19 is a connector for interfaces for receiving the signal from LSI for touch-panel control. The inputted signal can be referred to in FPGA. Please prepare of a user about a touch-panel interface circuitry. Please refer to the clause of FPGA functional explanation about the specification of FPGA.

The appearance figure of the connector for touch-panel interfaces is shown in Fig. 2.8.1, and signal arrangement is shown in Table 2.8.1.

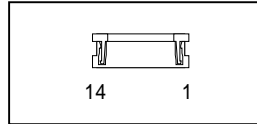


Figure 2.8.1 The connector appearance figure

Table 2.8.1 Signal arrangement of the connector (CN19)

Pin number	Signal name	IO	Note
1	3.3V		
2	3.3V		
3	DCLK	O	Clock output (it can change on FPGA to 60kHz - 110kHz).
4	GND		
5	CS#	O	Chip selection signal
6	GND		
7	DIN	O	Write Data
8	GND		
9	BUSY	I	Busy signal
10	GND		
11	DOUT	I	Read Data
12	GND		
13	IRQ#	I	Interruption
14	GND		

### 2.9. SH Bus Extension Connector

CN13 and CN14 are SH bus extension interface connectors. General-purpose from SH bus and FPGA for extension I/O is connected. The general-view figure of SH bus extension interface connector is shown in Fig. 2.9.1, and signal arrangement is shown in Table 2.9.1 and Table 2.9.2. A use connector is the product 52837-1679 made from Molex. Please refer to the clause of FPGA functional explanation about the specification of FPGA.

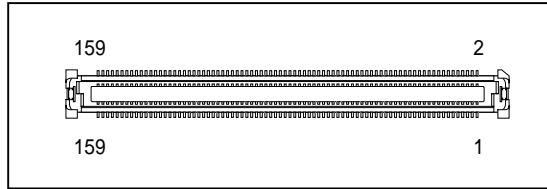


Figure 2.9.1 SH bus extension interface connector general-view figure

Table 2.9.1 Signal arrangement of SH bus extension interface connector (CN13)

Pin number	Signal name	IO	Note
1	3.3V		
2	3.3V		
3	3.3V		
4	3.3V		
5	5.0V		
6	5.0V		
7	5.0V		
8	5.0V		
9	GND		
10	GND		
11	CKIO	O	
12	GND		
13	GND		
14	EXT_D0	IO	
15	EXT_D1	IO	
16	GND		
17	GND		
18	EXT_D2	IO	
19	EXT_D3	IO	
20	GND		
21	GND		
22	EXT_D4	IO	
23	EXT_D5	IO	
24	GND		
25	GND		
26	EXT_D6	IO	
27	EXT_D7	IO	
28	GND		
29	GND		
30	EXT_D8	IO	
31	EXT_D9	IO	
32	GND		
33	GND		
34	EXT_D10	IO	
35	EXT_D11	IO	

Pin number	Signal name	IO	Note
36	GND		
37	GND		
38	EXT_D12	IO	
39	EXT_D13	IO	
40	GND		
41	GND		
42	EXT_D14	IO	
43	EXT_D15	IO	
44	GND		
45	GND		
46	EXT_D16	IO	
47	EXT_D17	IO	
48	GND		
49	GND		
50	EXT_D18	IO	
51	EXT_D19	IO	
52	GND		
53	GND		
54	EXT_D20	IO	
55	EXT_D21	IO	
56	GND		
57	GND		
58	EXT_D22	IO	
59	EXT_D23	IO	
60	GND		
61	GND		
62	EXT_D24	IO	
63	EXT_D25	IO	
64	GND		
65	GND		
66	EXT_D26	IO	
67	EXT_D27	IO	
68	GND		
69	GND		
70	EXT_D28	IO	
71	EXT_D29	IO	
72	GND		
73	GND		
74	EXT_D30	IO	
75	EXT_D31	IO	
76	GND		
77	GND		
78	EXT_RST_OUT	O	The reset output to an expansive board
79	EXT_RST_IN	I	Reset input from an expansive board
80	GND		
81	GND		
82	GND		
83	GND		
84	FPGA_GPIO21	IO	It is controlled by FPGA
85	FPGA_GPIO22	IO	It is controlled by FPGA

Pin number	Signal name	IO	Note
86	GND		
87	GND		
88	FPGA_GPIO23	IO	It is controlled by FPGA
89	FPGA_GPIO24	IO	It is controlled by FPGA
90	GND		
91	GND		
92	FPGA_GPIO25	IO	It is controlled by FPGA
93	FPGA_GPIO26	IO	It is controlled by FPGA
94	GND		
95	GND		
96	FPGA_GPIO27	IO	It is controlled by FPGA
97	FPGA_GPIO28	IO	It is controlled by FPGA
98	GND		
99	GND		
100	FPGA_GPIO29	IO	It is controlled by FPGA
101	FPGA_GPIO30	IO	It is controlled by FPGA
102	GND		
103	GND		
104	FPGA_GPIO31	IO	It is controlled by FPGA
105	FPGA_GPIO32	IO	It is controlled by FPGA
106	GND		
107	GND		
108	FPGA_GPIO33	IO	It is controlled by FPGA
109	FPGA_GPIO34	IO	It is controlled by FPGA
110	GND		
111	GND		
112	FPGA_GPIO35	IO	It is controlled by FPGA
113	FPGA_GPIO36	IO	It is controlled by FPGA
114	GND		
115	GND		
116	FPGA_GPIO37	IO	It is controlled by FPGA
117	FPGA_GPIO38	IO	It is controlled by FPGA
118	GND		
119	GND		
120	FPGA_GPIO39	IO	It is controlled by FPGA
121	FPGA_GPIO40	IO	It is controlled by FPGA
122	GND		
123	GND		
124	FPGA_GPIO41	IO	It is controlled by FPGA
125	FPGA_GPIO42	IO	It is controlled by FPGA
126	GND		
127	GND		
128	FPGA_GPIO43	IO	It is controlled by FPGA
129	FPGA_GPIO44	IO	It is controlled by FPGA
130	GND		
131	GND		
132	FPGA_GPIO45	IO	It is controlled by FPGA
133	FPGA_GPIO46	IO	It is controlled by FPGA
134	GND		
135	GND		

Pin number	Signal name	IO	Note
136	FPGA_GPIO47	IO	It is controlled by FPGA
137	FPGA_GPIO48	IO	It is controlled by FPGA
138	GND		
139	GND		
140	FPGA_GPIO49	IO	It is controlled by FPGA
141	FPGA_GPIO50	IO	It is controlled by FPGA
142	GND		
143	GND		
144	FPGA_GPIO51	IO	It is controlled by FPGA
145	FPGA_GPIO52	IO	It is controlled by FPGA
146	GND		
147	GND		
148	FPGA_GPIO53	IO	It is controlled by FPGA
149	GND		
150	GND		
151	GND		
152	GND		
153	3.3V		
154	3.3V		
155	3.3V		
156	3.3V		
157	12V		
158	12V		
159	12V		
160	12V		

Table 2.9.2 Signal arrangement of SH bus extension interface connector (CN14)

Pin number	Signal name	IO	Note
1	3.3V		
2	3.3V		
3	3.3V		
4	3.3V		
5	5.0V		
6	5.0V		
7	5.0V		
8	5.0V		
9	GND		
10	GND		
11	EXT_A0	O	
12	GND		
13	GND		
14	EXT_A1	O	
15	EXT_A2	O	
16	GND		
17	GND		
18	EXT_A3	O	
19	EXT_A4	O	
20	GND		
21	GND		
22	EXT_A5	O	
23	EXT_A6	O	
24	GND		
25	GND		

Pin number	Signal name	IO	Note
26	EXT_A7	O	
27	EXT_A8	O	
28	GND		
29	GND		
30	EXT_A9	O	
31	EXT_A10	O	
32	GND		
33	GND		
34	EXT_A11	O	
35	EXT_A12	O	
36	GND		
37	GND		
38	EXT_A13	O	
39	EXT_A14	O	
40	GND		
41	GND		
42	EXT_A15	O	
43	EXT_A16	O	
44	GND		
45	GND		
46	EXT_A17	O	
47	EXT_A18	O	
48	GND		
49	GND		
50	EXT_A19	O	
51	EXT_A20	O	
52	GND		
53	GND		
54	EXT_A21	O	
55	EXT_A22	O	
56	GND		
57	GND		
58	EXT_A23	O	
59	EXT_A24	O	
60	GND		
61	GND		
62	EXT_A25	O	
63	EXT_CS0#	O	
64	GND		
65	GND		
66	EXT_CS1#	O	
67	EXT_BS#	O	
68	GND		
69	GND		
70	EXT_RD#	O	
71	EXT_RD/WR#	O	
72	GND		
73	GND		
74	EXT_WE0#	O	
75	EXT_WE1#	O	

Pin number	Signal name	IO	Note
76	GND		
77	GND		
78	EXT_WE2#	O	
79	EXT_WE3#	O	
80	GND		
81	GND		
82	EXT_INT0	I	Interruption from an expansive board
83	EXT_INT1	I	Interruption from an expansive board
84	GND		
85	GND		
86	EXT_INT2	I	Interruption from an expansive board
87	EXT_INT3	I	Interruption from an expansive board
88	GND		
89	GND		
90	EXT_DREQ0#	I	
91	EXT_DREQ1#	I	
92	GND		
93	GND		
94	EXT_DRAK0	O	
95	EXT_DRAK1	O	
96	GND		
97	GND		
98	EXT_DACK0	O	
99	EXT_DACK1	O	
100	GND		
101	GND		
102	EXT_CE2A#	O	
103	EXT_CE2B#	O	
104	GND		
105	GND		
106	EXT_RDY#	I	
107	EXT_IOIS16	IO	
108	GND		
109	GND		
110	GND		
111	GND		
112	FPGA_GPIO0	IO	It is controlled by FPGA
113	FPGA_GPIO1	IO	It is controlled by FPGA
114	GND		
115	GND		
116	FPGA_GPIO2	IO	It is controlled by FPGA
117	FPGA_GPIO3	IO	It is controlled by FPGA
118	GND		
119	GND		
120	FPGA_GPIO4	IO	It is controlled by FPGA
121	FPGA_GPIO5	IO	It is controlled by FPGA
122	GND		
123	GND		
124	FPGA_GPIO6	IO	It is controlled by FPGA
125	FPGA_GPIO7	IO	It is controlled by FPGA

Pin number	Signal name	IO	Note
126	GND		
127	GND		
128	FPGA_GPIO8	IO	It is controlled by FPGA
129	FPGA_GPIO9	IO	It is controlled by FPGA
130	GND		
131	GND		
132	FPGA_GPIO10	IO	It is controlled by FPGA
133	FPGA_GPIO11	IO	It is controlled by FPGA
134	GND		
135	GND		
136	FPGA_GPIO12	IO	It is controlled by FPGA
137	FPGA_GPIO13	IO	It is controlled by FPGA
138	GND		
139	GND		
140	FPGA_GPIO14	IO	It is controlled by FPGA
141	FPGA_GPIO15	IO	It is controlled by FPGA
142	GND		
143	GND		
144	FPGA_GPIO16	IO	It is controlled by FPGA
145	FPGA_GPIO17	IO	It is controlled by FPGA
146	GND		
147	GND		
148	FPGA_GPIO18	IO	It is controlled by FPGA
149	FPGA_GPIO19	IO	It is controlled by FPGA
150	GND		
151	GND		
152	FPGA_GPIO20	IO	It is controlled by FPGA
153	3.3V		
154	3.3V		
155	3.3V		
156	3.3V		
157	5.0V		
158	5.0V		
159	5.0V		
160	5.0V		

### 2.10. Serial Connector

CN6 is mainly used by the object for serial interface cable splicing, connecting with a console. SCIF of SH7751R is connected to Dsub9 pin connector via a RS232C driver receiver. As an exclusive clock for SCIF, a communication baud rate inputs 1.8432MHz into SH7751R, and is considering it as fixation at 115200bps. It connects with a DSUB9 pin cross cable. Signal arrangement of a serial interface connector is shown in Table 2.10.1.

Table 2.10.1 Signal arrangement of serial-interface connector (CN6)

Pin number	Signal name	IO	Note
1	NC		
2	RD	I	Data transmission
3	TD	O	Data reception
4	DTR		It is connection on 6 pins and a board
5	GND		
6	DSR		It is connection on 4 pins and a board
7	RTS	I	Request to Send
8	CTS	O	Ready for sending
9	NC		

### 2.11. CF Card Connector

CN9 is a connector for CF card interfaces. Timing control is performed in FPGA. Access equivalent to the True-IDE interface timing based on CFA is possible. It corresponds to PIO mode 0-4. Please refer to the clause of FPGA functional explanation about the specification of FPGA.

### 2.12. FROM Board Connector

CN8 is a connector for FROM board interfaces. The general-view figure of a FROM board interface connector is shown in Fig. 2.12.1, and signal arrangement is shown in Table 2.12.1. A use connector is the product 52837-1079 made from Molex.



Figure 2.12.1 FROM board interface connector general view

Table 2.12.1 Signal arrangement of FROM board interface connector (CN8)

Pin number	Signal name	IO	Note
1	5.0V		
2	3.3V		
3	GND		
4	GND		
5	D0	IO	
6	D16	IO	
7	D1	IO	
8	D17	IO	
9	D2	IO	
10	D18	IO	
11	D3	IO	
12	D19	IO	
13	D4	IO	
14	D20	IO	
15	D5	IO	
16	D21	IO	
17	D6	IO	
18	D22	IO	
19	D7	IO	
20	D23	IO	
21	D8	IO	
22	D24	IO	
23	D9	IO	
24	D25	IO	
25	5.0V		
26	3.3V		
27	GND		
28	GND		
29	D10	IO	
30	D26	IO	
31	D11	IO	
32	D27	IO	
33	D12	IO	
34	D28	IO	
35	D13	IO	

Pin number	Signal name	IO	Note
36	D29	IO	
37	D14	IO	
38	D30	IO	
39	D15	IO	
40	D31	IO	
41	A0	O	
42	A13	O	
43	A1	O	
44	A14	O	
45	A2	O	
46	A15	O	
47	A3	O	
48	A16	O	
49	5.0V		
50	3.3V		
51	GND		
52	GND		
53	A4	O	
54	A17	O	
55	A5	O	
56	A18	O	
57	A6	O	
58	A19	O	
59	A7	O	
60	A20	O	
61	A8	O	
62	A21	O	
63	A9	O	
64	A22	O	
65	A10	O	
66	A23	O	
67	A11	O	
68	A24	O	
69	A12	O	
70	A25	O	
71	5.0V		
72	3.3V		
73	GND		
74	GND		
75	WE0#	O	
76	CS0#	O	
77	WE1#	O	
78	NC		
79	WE2#	O	
80	NC		
81	WE3#	O	
82	NC		
83	GND		
84	GND		
85	RD#	O	

Pin number	Signal name	IO	Note
86	NC		
87	RD/WR#	O	
88	NC		
89	NC		10K pull-up
90	BS#	O	
91	RESET#	O	
92	NC		10K pull-up
93	GND		
94	CKIO	O	
95	5.0V		
96	5.0V		
97	3.3V		
98	3.3V		
99	GND		
100	GND		

### 2.13. Real Time Clock

The real time clock module “RTC-9701JE” (made from the EPSON TOYOCOM CORPORATION) are mounted in this board as an object for time management. It has connected with the SCI interface of SH7751R. Please refer to the data of RTC-9701JE about the details of the usage.

About the battery back-up, it has realized by inserting a button battery in BT1.

When a button battery is exchanged, a diameter should use a 20mm product.

### 2.14. Serial Interface (Internal FPGA)

SCIF is mounted in FPGA of this board. The SCIF terminal is prepared by the through hole on this board. The silk of CN17 is printed. Signal arrangement is shown in Table 2.14.1. Please refer to the clause of FPGA functional explanation about the specification of FPGA.

Table 2.14.1 Signal arrangement of connector for SCIF interfaces with built-in FPGA

Pin number	Signal name	IO	Note
1	3.3V		
2	TxD	O	Data transmission
3	RxD	I	Data reception
4	CTS	O	Ready for sending
5	RTS	I	Request to Send
6	NC		
7	GND		
8	GND		

### 2.15. Reset Signal

The reset signal connection diagram of this product is shown in Fig. 2.15.1.

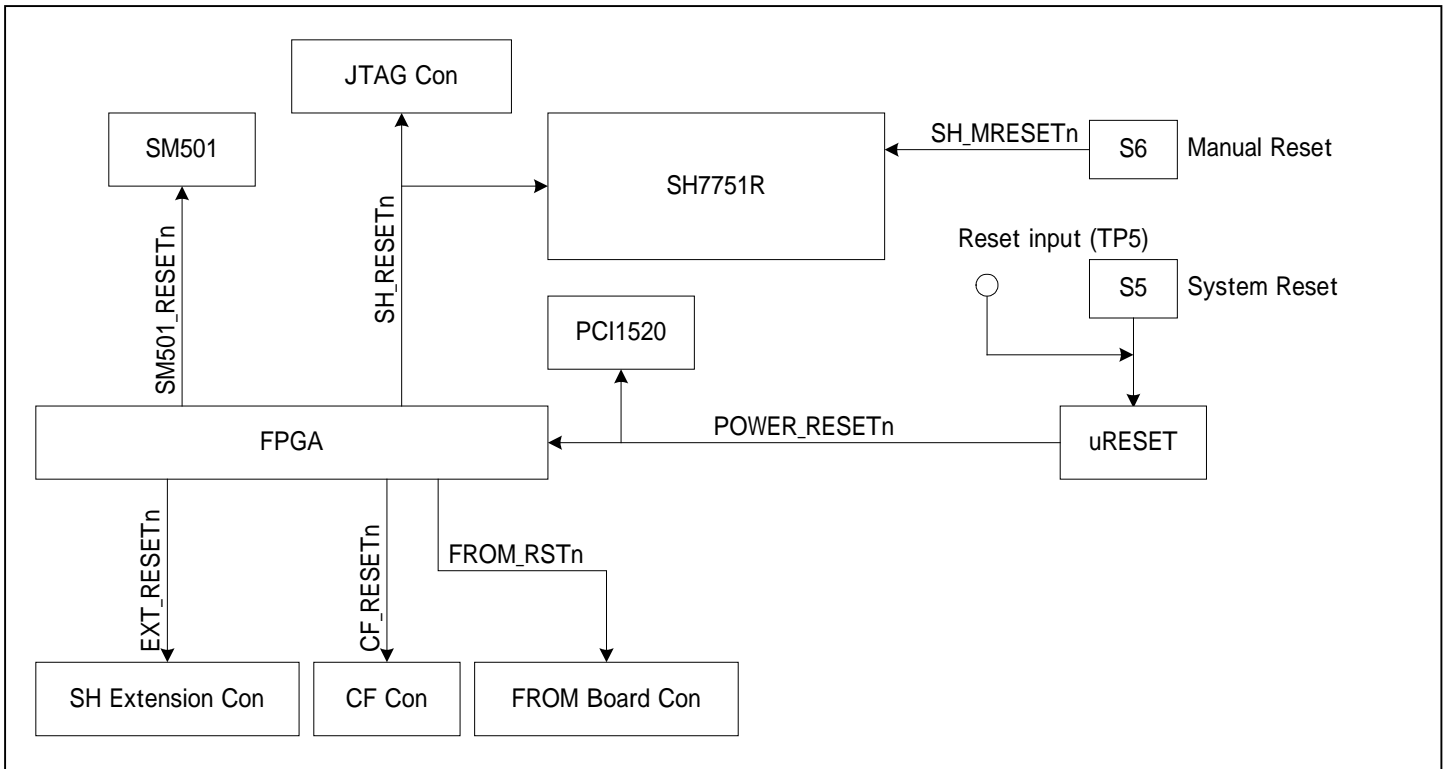


Figure 2.15.1 reset signal connection diagram

#### 2.15.1. Power On Reset

A power-on reset signal is published to each device at the time of a power supply. 3.3V generated from the voltage regulator are made into criteria voltage, and when criteria voltage is less than [2.93V], a reset signal is published from Reset IC. With this board, since the configuration of FPGA is performed at the time of a power supply, the reset signal over SH7751R is inputted after the configuration end of FPGA. Power-on reset timing is shown in Fig. 2.15.2.

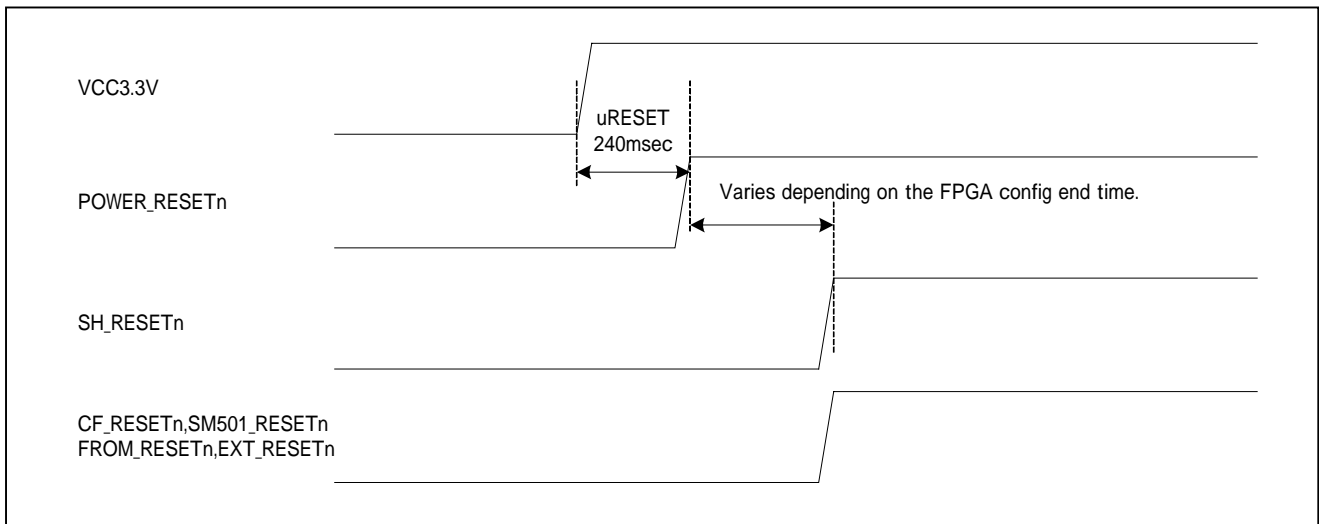


Figure 2.15.2 power-on reset timing

2.15.2. System Reset

This product publishes a system-reset signal under S5 switch-pushing. In a system reset, a reset pulse is published to this timing to each device. System-reset timing is shown in Fig. 2.15.3.

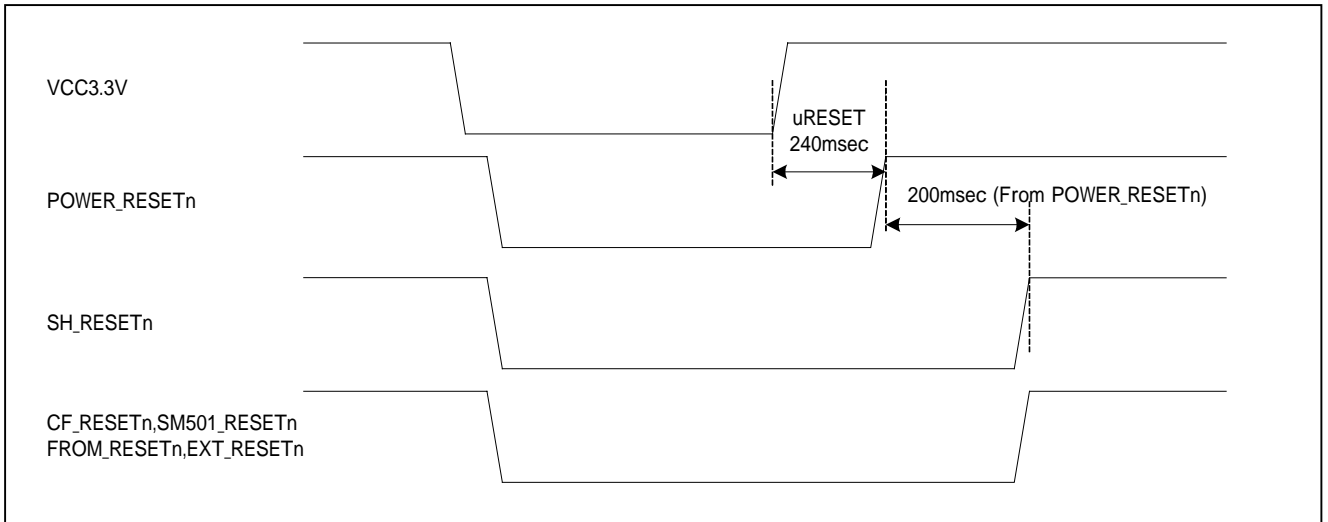


Figure 2.15.3 system-reset timing

2.15.3. Manual Reset

This product publishes a manual reset signal to SH7751R under S6 switch-pushing. The reset signal to other devices is not published. Manual reset timing is shown in Fig. 2.15.4.

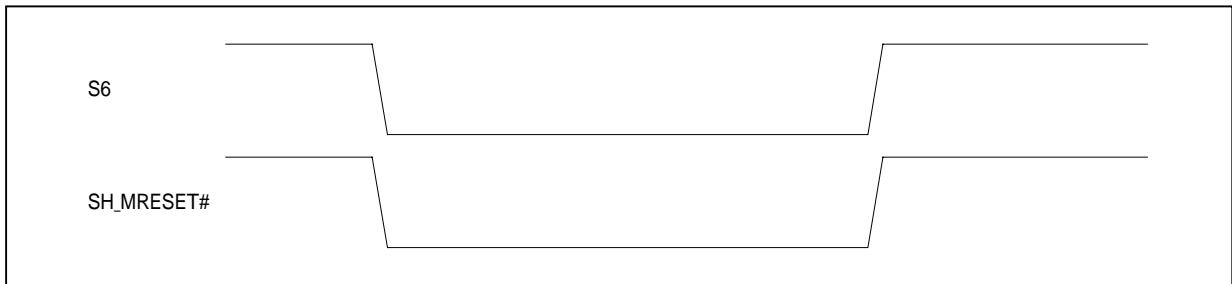


Figure 2.15.4 system-reset timing

2.15.4. CF Card Reset

About the reset signal to CF card, after the power supply outputted from the power supply supply control IC(TPS2211) to CF card is stabilized, it is made the specification of which the reset to CF card is canceled. Moreover, in case the power supply from TPS2211 is intercepted, the reset signal to CF card is confirmed. CF card reset timing is shown in Fig. 2.15.5.

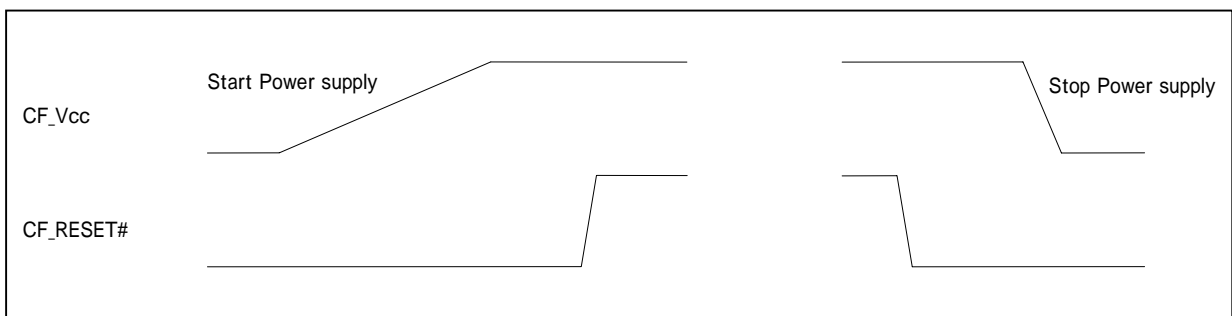


Figure 2.15.5 CF card reset timing

### 3. FPGA Logic Function Specification

#### 3.1. Pin Function

For the FPGA, the EP1C4F400C8N manufactured by Altera is used. Table 3-1-1 is a list of the pin assignments. Pins dedicated to JTAG and power supply pins are omitted. The EP1C4F400C8N manual is referred to for details.

Table 3-1-1 EP1C4F400C8N Pin assignments

Signal Name	FPGA Pin	IO	Function	Active
SH_CS0#	A4	I	SH7751R Chip Select Signal 0	L
SH_CS1#	A6	I	SH7751R Chip Select Signal 1	L
SH_CS2#	A7	I	SH7751R Chip Select Signal 2	L
SH_CS4#	A9	I	SH7751R Chip Select Signal 4	L
SH_CS5#	A10	I	SH7751R Chip Select Signal 5	L
SH_CS6#	B4	I	SH7751R Chip Select Signal 6	L
SH_BS#	B5	I	SH7751R Bus Start Signal	L
SH_WE0#	B6	I	SH7751R Write Enable Signal 0	L
SH_WE1#	B7	I	SH7751R Write Enable Signal 1	L
SH_WE2#	B8	I	SH7751R Write Enable Signal 2	L
SH_WE3#	B9	I	SH7751R Write Enable Signal 3	L
SH_RD#	B10	I	SH7751R Read Enable Signal	L
SH_RDWE#	C2	I	SH7751R Read/Write Strobe Signal	R:H/W:L
SH_RDY#	C5	O	SH7751R Ready Signal	L
SH_CKIO	K5	I	SH7751R Clock Signal	-
SH_RESET#	T4	O	SH7751R Power ON Reset Signal	L
SH_IRL0#	C7	O	SH7751R Interrupt Signal 0	L
SH_IRL1#	C8	O	SH7751R Interrupt Signal 1	L
SH_IRL2#	C9	O	SH7751R Interrupt Signal 2	L
SH_IRL3#	C10	O	SH7751R Interrupt Signal 3	L
SH_DREQ0	D1	O	SH7751R DMA Request Signal 0	L
SH_DREQ1	D2	O	SH7751R DMA Request Signal 1	L
SH_DACK0	D4	I	SH7751R DMA Acknowledge Signal 0	H
SH_DACK1	D5	I	SH7751R DMA Acknowledge Signal 1	H
SH_A[1]	D6	I	SH7751R Address Bus	-
SH_A[2]	D7	I	SH7751R Address Bus	-
SH_A[3]	D8	I	SH7751R Address Bus	-
SH_A[4]	D9	I	SH7751R Address Bus	-
SH_A[5]	D10	I	SH7751R Address Bus	-
SH_A[6]	E2	I	SH7751R Address Bus	-
SH_A[7]	E3	I	SH7751R Address Bus	-
SH_A[8]	E4	I	SH7751R Address Bus	-
SH_A[9]	E5	I	SH7751R Address Bus	-
SH_A[10]	E6	I	SH7751R Address Bus	-
SH_A[11]	E7	I	SH7751R Address Bus	-
SH_A[12]	E8	I	SH7751R Address Bus	-
SH_A[13]	E9	I	SH7751R Address Bus	-
SH_A[14]	E10	I	SH7751R Address Bus	-
SH_A[15]	F1	I	SH7751R Address Bus	-
SH_A[16]	F2	I	SH7751R Address Bus	-
SH_A[17]	F4	I	SH7751R Address Bus	-
SH_A[18]	F5	I	SH7751R Address Bus	-
SH_A[19]	F6	I	SH7751R Address Bus	-

Signal Name	FPGA Pin	IO	Function	Active
SH_A[20]	F7	I	SH7751R Address Bus	-
SH_A[21]	F8	I	SH7751R Address Bus	-
SH_A[22]	F10	I	SH7751R Address Bus	-
SH_A[23]	G1	I	SH7751R Address Bus	-
SH_A[24]	G2	I	SH7751R Address Bus	-
SH_A[25]	G3	I	SH7751R Address Bus	-
SH_D[0]	G4	IO	SH7751R Data Bus	-
SH_D[1]	G5	IO	SH7751R Data Bus	-
SH_D[2]	G6	IO	SH7751R Data Bus	-
SH_D[3]	G7	IO	SH7751R Data Bus	-
SH_D[4]	H1	IO	SH7751R Data Bus	-
SH_D[5]	H2	IO	SH7751R Data Bus	-
SH_D[6]	H3	IO	SH7751R Data Bus	-
SH_D[7]	H4	IO	SH7751R Data Bus	-
SH_D[8]	H5	IO	SH7751R Data Bus	-
SH_D[9]	H6	IO	SH7751R Data Bus	-
SH_D[10]	H7	IO	SH7751R Data Bus	-
SH_D[11]	J1	IO	SH7751R Data Bus	-
SH_D[12]	J2	IO	SH7751R Data Bus	-
SH_D[13]	J3	IO	SH7751R Data Bus	-
SH_D[14]	J4	IO	SH7751R Data Bus	-
SH_D[15]	J5	IO	SH7751R Data Bus	-
SH_D[16]	J6	IO	SH7751R Data Bus	-
SH_D[17]	J7	IO	SH7751R Data Bus	-
SH_D[18]	J8	IO	SH7751R Data Bus	-
SH_D[19]	M1	IO	SH7751R Data Bus	-
SH_D[20]	M2	IO	SH7751R Data Bus	-
SH_D[21]	M3	IO	SH7751R Data Bus	-
SH_D[22]	M4	IO	SH7751R Data Bus	-
SH_D[23]	M5	IO	SH7751R Data Bus	-
SH_D[24]	M6	IO	SH7751R Data Bus	-
SH_D[25]	M7	IO	SH7751R Data Bus	-
SH_D[26]	N1	IO	SH7751R Data Bus	-
SH_D[27]	N2	IO	SH7751R Data Bus	-
SH_D[28]	N3	IO	SH7751R Data Bus	-
SH_D[29]	N4	IO	SH7751R Data Bus	-
SH_D[30]	N5	IO	SH7751R Data Bus	-
SH_D[31]	N6	IO	SH7751R Data Bus	-
CF_VCC5EN#	R4	O	CF Card 5.0V Power control Signal	L
CF_VCC3EN#	R5	O	CF Card 3.3V Power control Signal	L
CF_IORD#	R6	O	CF Card I/O Write strobe Signal	L
CF_IOWR#	R7	O	CF Card I/O Read strobe Signal	L
CF_CE0#	T2	O	CF Card Chip Select Signal	L
CF_CE1#	T3	O	CF Card Chip Select Signal	L
CF_CDINT1#	T5	I	CF Card Card Detect Signal 1	L
CF_CDINT2#	T7	I	CF Card Card Detect Signal 2	L
CF_INT	T8	I	CF Card Interrupt Signal	L
CF_RDY#	T9	I	CF Card Ready Signal	H
CF_RST#	T10	O	CF Card Reset Signal	L
CF_DET_LED	R9	O	CF Card Card Detect LED Signal	H
CF_A[0]	U1	O	CF Card Address Bus	-
CF_A[1]	U2	O	CF Card Address Bus	-

Signal Name	FPGA pin	IO	Function	Active
CF_A[2]	U3	OO	CF Card Address Bus	-
CF_D[0]	V2	IO	CF Data Bus	-
CF_D[1]	V3	IO	CF Data Bus	-
CF_D[2]	V4	IO	CF Data Bus	-
CF_D[3]	V5	IO	CF Data Bus	-
CF_D[4]	V6	IO	CF Data Bus	-
CF_D[5]	V7	IO	CF Data Bus	-
CF_D[6]	V8	IO	CF Data Bus	-
CF_D[7]	V9	IO	CF Data Bus	-
CF_D[8]	V10	IO	CF Data Bus	-
CF_D[9]	W3	IO	CF Data Bus	-
CF_D[10]	W4	IO	CF Data Bus	-
CF_D[11]	W5	IO	CF Data Bus	-
CF_D[12]	W6	IO	CF Data Bus	-
CF_D[13]	W7	IO	CF Data Bus	-
CF_D[14]	W8	IO	CF Data Bus	-
CF_D[15]	W9	IO	CF Data Bus	-
PCI_INTA#	Y6	I	PCI Interrupt Signal A	L
PCI_INTB#	Y7	I	PCI Interrupt Signal B	L
PCI_INTC#	Y8	I	PCI Interrupt Signal C	L
PCI_INTD#	Y9	I	PCI Interrupt Signal D	L
PCI_PRST#	Y4	O	PCI Reset Signal	L
FROM_CS#_FPGA	R1	O	FlashROM Board Chip Select Signal	L
FROM_RST#	R2	O	FlashROM Board Reset Signal	L
EXT_RD/WE#	C14	O	External extension connector Read/Write Strobe Signal	R:H/W:L
EXT_DB_OE#	C16	O	External extension connector Read Signal	L
EXT_INT0#	C17	I	External extension connector Interrupt Signal 0	L
EXT_INT1#	C18	I	External extension connector Interrupt Signal 1	L
EXT_INT2#	C19	I	External extension connector Interrupt Signal 2	L
EXT_INT3#	K15	I	External extension connector Interrupt Signal 3	L
EXT_RESET#_OUT	D11	O	External extension connector Reset Signal	L
EXT_RESET#_IN	D12	I	External extension connector Reset input Signal	L
SM501_RESET#	D15	O	SM501 Reset Signal	L
SM501_INT#	D16	I	SM501 Interrupt Signal	L
SM501_BS#	D17	O	SM501 Bus Start Signal	L
SM501_CS#	D18	O	SM501 Chip Select Signal	L
SM501_RDY#	E17	I	SM501 Ready Signal	L
RTC_AIRQ#	F16	I	RealTime Clock Alarm Interrupt Signal	L
RTC_TIRQ#	F17	I	RealTime Clock Timer Interrupt Signal	L
RTC_CE	F19	O	RealTime Clock Chip Select Signal	H
LOCAL_BUS_EN#	G15	O	External extension connector Bus enable signal	L
EXT_DACK0	G16	O	External extension connector DMA Request Signal 0	H
EXT_DACK1	G17	O	External extension connector DMA Request Signal 1	H
EXT_DREQ0#	G18	I	External extension connector DMA Acknowledge Signal 0	L
EXT_DREQ1#	G19	I	External extension connector DMA Acknowledge Signal 1	L
POWER_OFF#	G20	O	Power supply Shutdown Signal	L
SH_MODESET#	W14	O	SH7751R Mode setting Signal	L
POWER_RESET#	F3	I	PoweON Reset Signal	L
SCI_TXD	W10	O	TXD data signal of FPGA's SCIF	-
SCI_RXD	W16	I	RXD data signal of FPGA's SCIF	-
TP_BUSY	F12	I	Touch-panel controller Busy Signal	H
TP_CS#	H18	O	Touch-panel controller Chip Select Signal	L

Signal Name	FPGA pin	IO	Function	Active
TP_DIN	H19	O	Touch-panel controller Data Output Signal	-
TP_DOUT	H20	I	Touch-panel controller Data Input Signal	-
TP_DCLK	R11	O	Touch-panel controller Clock Signal	-
TP_INT#	M19	I	Touch-panel controller Interrupt Signal	H
LCD_BKL_OFF#	C6	O	The back light control signal for LCD panel	L
SCI_RTS	V12		RTS signal of FPGA's SCIF for Modems	-
SCI_CTS	V13		CTS signal of FPGA's SCIF for Modems	-
Reserved [1]	V14		Reserve Signal 1 (Connected to Resistor)	-
Reserved [2]	V15		Reserve Signal 2 (Connected to Resistor)	-
Reserved [3]	V16		Reserve Signal 3 (Connected to Resistor)	-
Reserved [4]	V17		Reserve Signal 4 (Connected to Resistor)	-
Reserved [5]	W11		Reserve Signal 5 (Connected to Resistor)	-
Reserved [6]	W13		Reserve Signal 6 (Connected to Resistor)	-
USB_RESET#	W12		USB Hub controller Reset Signal	-
FPGA_GPIO00	H14	IO	FPGA General Input/Output Port	-
FPGA_GPIO01	H15	IO	FPGA General Input/Output Port	-
FPGA_GPIO02	H16	IO	FPGA General Input/Output Port	-
FPGA_GPIO03	H17	IO	FPGA General Input/Output Port	-
FPGA_GPIO04	J13	IO	FPGA General Input/Output Port	-
FPGA_GPIO05	J14	IO	FPGA General Input/Output Port	-
FPGA_GPIO06	J15	IO	FPGA General Input/Output Port	-
FPGA_GPIO07	J16	IO	FPGA General Input/Output Port	-
FPGA_GPIO08	M14	IO	FPGA General Input/Output Port	-
FPGA_GPIO09	M15	IO	FPGA General Input/Output Port	-
FPGA_GPIO10	M16	IO	FPGA General Input/Output Port	-
FPGA_GPIO11	M17	IO	FPGA General Input/Output Port	-
FPGA_GPIO12	M18	IO	FPGA General Input/Output Port	-
FPGA_GPIO13	M20	IO	FPGA General Input/Output Port	-
FPGA_GPIO14	N14	IO	FPGA General Input/Output Port	-
FPGA_GPIO15	N15	IO	FPGA General Input/Output Port	-
FPGA_GPIO16	N16	IO	FPGA General Input/Output Port	-
FPGA_GPIO17	N17	IO	FPGA General Input/Output Port	-
FPGA_GPIO18	N18	IO	FPGA General Input/Output Port	-
FPGA_GPIO19	N19	IO	FPGA General Input/Output Port	-
FPGA_GPIO20	P1	IO	FPGA General Input/Output Port	-
FPGA_GPIO21	P2	IO	FPGA General Input/Output Port	-
FPGA_GPIO22	P3	IO	FPGA General Input/Output Port	-
FPGA_GPIO23	R13	IO	FPGA General Input/Output Port	-
FPGA_GPIO24	R14	IO	FPGA General Input/Output Port	-
FPGA_GPIO25	R15	IO	FPGA General Input/Output Port	-
FPGA_GPIO26	R16	IO	FPGA General Input/Output Port	-
FPGA_GPIO27	R17	IO	FPGA General Input/Output Port	-
FPGA_GPIO28	R18	IO	FPGA General Input/Output Port	-
FPGA_GPIO29	R19	IO	FPGA General Input/Output Port	-
FPGA_GPIO30	R20	IO	FPGA General Input/Output Port	-
FPGA_GPIO31	U12	IO	FPGA General Input/Output Port	-
FPGA_GPIO32	U13	IO	FPGA General Input/Output Port	-
FPGA_GPIO33	U14	IO	FPGA General Input/Output Port	-
FPGA_GPIO34	U15	IO	FPGA General Input/Output Port	-
FPGA_GPIO35	T11	IO	FPGA General Input/Output Port	-
FPGA_GPIO36	T12	IO	FPGA General Input/Output Port	-
FPGA_GPIO37	T13	IO	FPGA General Input/Output Port	-

Signal Name	FPGA pin	IO	Function	Active
FPGA_GPIO38	T14	IO	FPGA General Input/Output Port	-
FPGA_GPIO39	T15	IO	FPGA General Input/Output Port	-
FPGA_GPIO40	T16	IO	FPGA General Input/Output Port	-
FPGA_GPIO41	T17	IO	FPGA General Input/Output Port	-
FPGA_GPIO42	T18	IO	FPGA General Input/Output Port	-
FPGA_GPIO43	U16	IO	FPGA General Input/Output Port	-
FPGA_GPIO44	U17	IO	FPGA General Input/Output Port	-
FPGA_GPIO45	J17	IO	FPGA General Input/Output Port	-
FPGA_GPIO46	J18	IO	FPGA General Input/Output Port	-
FPGA_GPIO47	J19	IO	FPGA General Input/Output Port	-
FPGA_GPIO48	J20	IO	FPGA General Input/Output Port	-
FPGA_GPIO49	K19	IO	FPGA General Input/Output Port	-
FPGA_GPIO50	V19	IO	FPGA General Input/Output Port	-
FPGA_GPIO51	W18	IO	FPGA General Input/Output Port	-
FPGA_GPIO52	U20	IO	FPGA General Input/Output Port	-
EXT_PRST#	N7	IO	External extension Board Detect Signal	L
FPGA_LED0	A11	O	LED control signal for debugging	H
FPGA_LED1	A12	O	LED control signal for debugging	H
FPGA_LED2	A13	O	LED control signal for debugging	H
FPGA_LED3	A14	O	LED control signal for debugging	H
FPGA_LED4	A15	O	LED control signal for debugging	H
FPGA_LED5	A17	O	LED control signal for debugging	H
FPGA_LED6	B11	O	LED control signal for debugging	H
FPGA_LED7	B12	O	LED control signal for debugging	H
FPGA_SW0	B13	I	DIP switch signal for debugging	-
FPGA_SW1	B14	I	DIP switch signal for debugging	-
FPGA_SW2	B15	I	DIP switch signal for debugging	-
FPGA_SW3	B16	I	DIP switch signal for debugging	-
FPGA_SW4	B17	I	DIP switch signal for debugging	-
FPGA_SW5	B18	I	DIP switch signal for debugging	-
FPGA_SW6	C11	I	DIP switch signal for debugging	-
FPGA_SW7	C12	I	DIP switch signal for debugging	-
B_SW1	P4	I	DIP switch signal for boot loader selection	-
B_SW2	P5	I	DIP switch signal for boot loader selection	-
B_SW3	P6	I	DIP switch signal for boot loader selection	-

## 3.2. Register Map

A register map is shown in Table 3.2.1.

Table3-2-1 FPGA Internal Register List

No	Register Name	Abbreviation	Bit	Initial Value	R/W	Address
1	Interrupt mask control Register	IRLMSK	16	H'0000	R/W	H'0400_0000
2	Interrupt status control Register	IRLMON	16	H'0000	R/W	H'0400_0002
3	CompactFlash timing control Register	CFCTL	16	H'0000	R/W	H'0400_0004
4	CompactFlash power-supply control Register	CFPOW	16	H'0000	R/W	H'0400_0006
5	RealTime Clock chip enable control Register	RTCCE	16	H'0000	R/W	H'0400_000C
6	PCI expansion slot card detection control Register	PCICD	16	H'0000	R	H'0400_000E
7	Touch-panel control Register	TP_CTL	16	H'0000	R/W	H'0400_0010
8	Touch-panel TXCLK variable control Register	TP_TXCLK	16	H'0000	R/W	H'0400_0012
9	Touch-panel control reset control Register	TP_RST	16	H'0000	W	H'0400_0014
10	Touch-panel X position data Register	TP_XRD	16	H'0000	R	H'0400_0016
11	Touch-panel Y position data Register	TP_YRD	16	H'0000	R	H'0400_0018
12	SM501 reset control Register	SM501RST	16	H'0000	W	H'0400_0020
13	CompactFlash reset control Register	CFRST	16	H'0000	W	H'0400_0024
14	Expansion Connector reset control Register	EXTRST	16	H'0000	R/W	H'0400_0028
15	CompactFlash insertion detection interrupt clear control Register	CFCDINTCLR	16	H'0000	W	H'0400_002A
16	Board power OFF control Register	POWOFF	16	H'0000	W	H'0400_0030
17	FPGA version management control Register	VERREG	16	H'0010	R	H'0400_0032
18	General input port control Register	INPORT	16	H'00xx	R	H'0400_0034
19	General output port control Register	OUTPORT	16	H'0000	W	H'0400_0036
20	Board version Register	BVERREG	16	H'0011	R	H'0400_0038
21	GPIO Port 0 Data Register	GPIO_DATA_0G	16	H'0000	R/W	H'0400_0040
22	GPIO Port 1 Data Register	GPIO_DATA_1G	16	H'0000	R/W	H'0400_0042
23	GPIO Port 2 Data Register	GPIO_DATA_2G	16	H'0000	R/W	H'0400_0044
24	GPIO Port 3 Data Register	GPIO_DATA_3G	16	H'0011	R/W	H'0400_0046
25	General IO Pin function Register 0	GPIO_DIR_0G	16	H'0000	R/W	H'0400_0048
26	General IO Pin function Register 1	GPIO_DIR_1G	16	H'0000	R/W	H'0400_004A
27	General IO Pin function Register 2	GPIO_DIR_2G	16	H'0000	R/W	H'0400_004C
28	General IO Pin function Register 3	GPIO_DIR_3G	16	H'0000	R/W	H'0400_004E
29	External extension Board Status Register	EXT_PRST	16	H'0000	R	H'0400_0050
30	FlashROM board Reset control Register	FROMRST	16	H'0000	W	H'0400_0052
31	Back light control Register (for LCD Panel)	LCDPOW	18	H'0000	W	H'0400_0054
32	SCIF Serial mode control Register	SCSMR	16	H'0000	R/W	H'0400_0100
33	SCIF Bit rate Register	SCBRR	16	H'00FF	R/W	H'0400_0104
34	SCIF Serial Control Register	SCSCR	16	H'0000	R/W	H'0400_0108
35	SCIF Transmit FIFO Data Register	SCFTDR	16	H'0000	W	H'0400_010C
36	SCIF Status Register	SCFSR	16	H'0060	R/(W)	H'0400_0110
37	SCIF Receive FIFO Register	SCFRDR	16	H'0000	R	H'0400_0114
38	SCIF FIFO control Register	SCFCR	16	H'0000	R/W	H'0400_0118
39	SCIF FIFO Data count Register	SCFDR	16	H'0000	R	H'0400_011C
40	SCIF Serial port Register	SCSPTR	16	H'0000	R/W	H'0400_0120
41	SCIF line Status Register	SCLSR	16	H'0000	R/(W)	H'0400_0124

## 4. Extension Board Specification

### 4.1. About the extension board size

Please observe the following matters when the extension board for this product is made by the customer.

Figure 4.1.1 shows the extension board dimensional drawing.

In the substrate size, the vertical direction is 138.00mm fixation. Please give horizontal direction to me longest the shorts by 147.00mm as 100.00mm.

CN13 and 14 are the insect eyeviews on the part side. The terminal number is also similar.

 <b>CAUTION</b>
Please do not mount parts other than CN13 and CN14 on the solder side of the extension board.

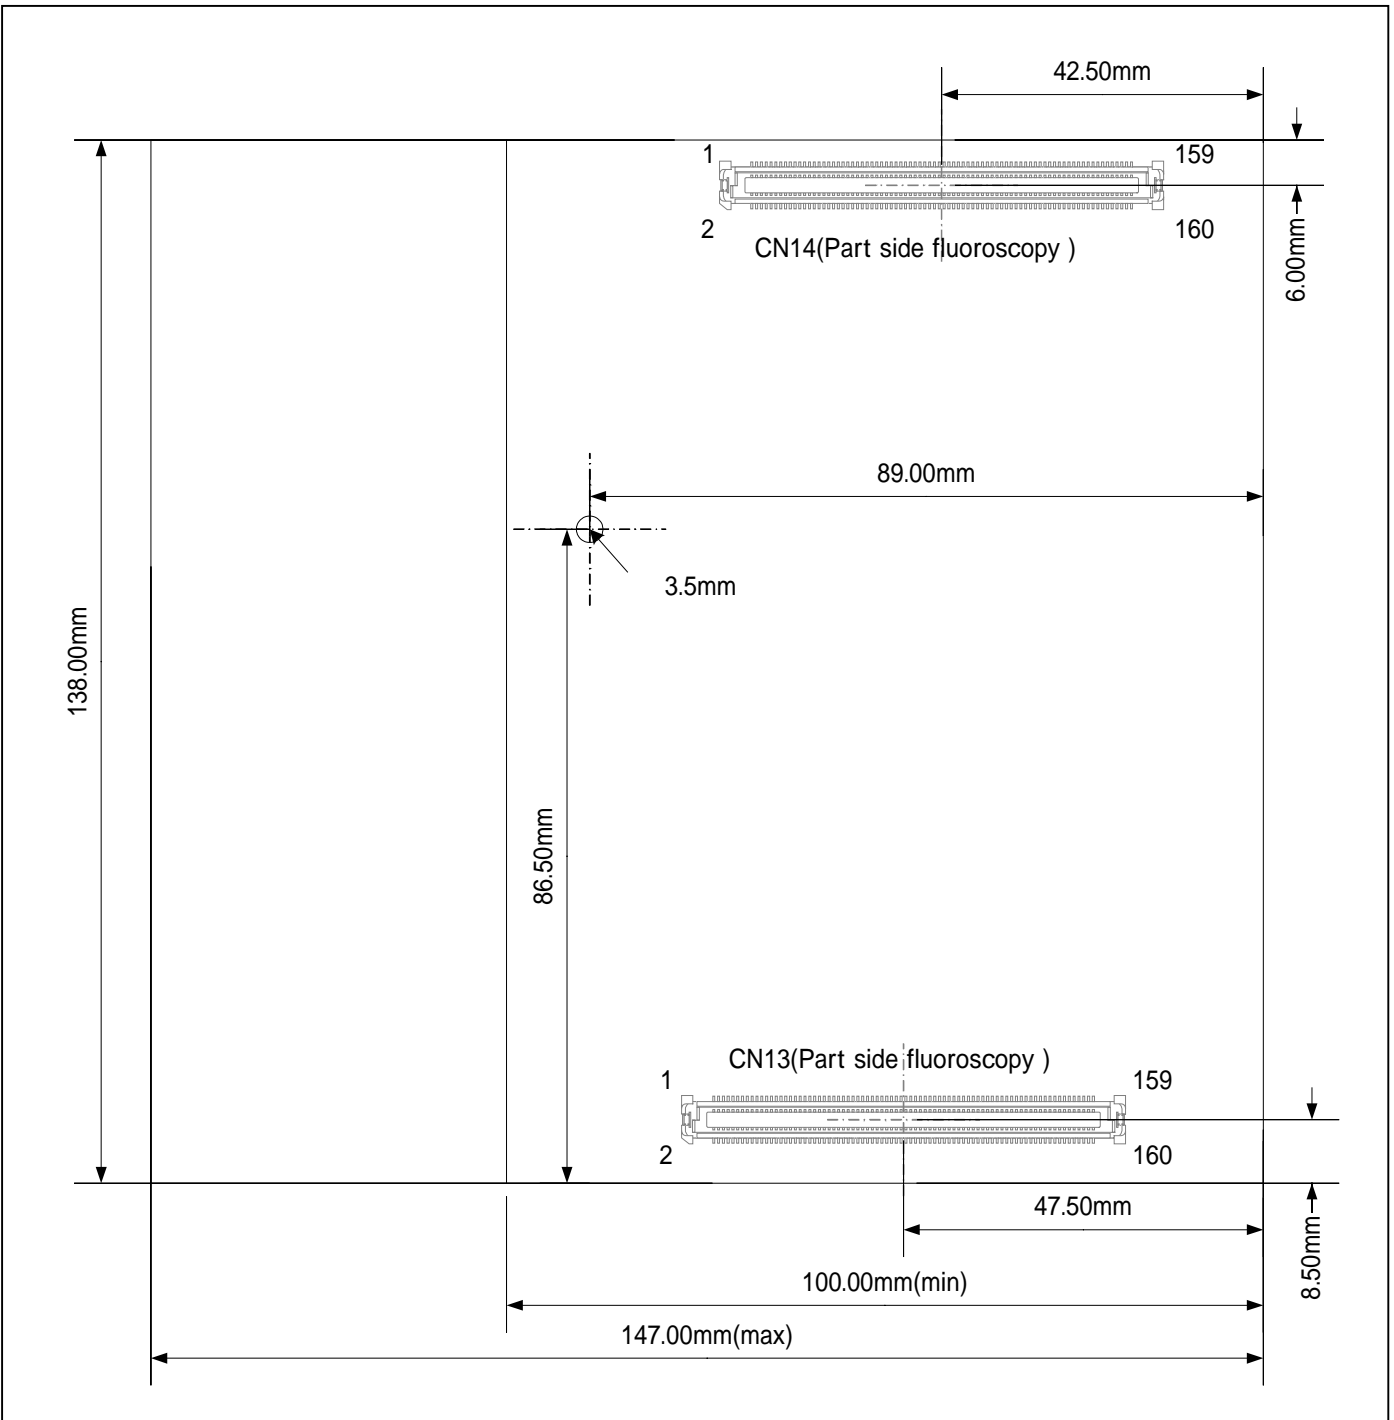


Figure 4.1.1 The extension board dimension

## 4.2. The allowable current of add-in board and PCI card

The maximum consumed electric power of this product is about 11W. When you carry out use of an add-in board or the PCI card of a user, be careful of the following points.

### 4.2.1. The allowable current of add-in board

When an add-in board is prepared of a user, please use the thing of the specification which does not exceed 3.3V/2A.

### 4.2.2. The allowable current of PCI board

When a PCI card is used of a user, please use the thing of the specification which does not exceed 3.3V/3A.



## CAUTION

Although the connector based on PCI 5V card specification is mounted, the specification top PCI bus signal of SH7751R should use the card of 3.3V signal specification. If 5V signal is supplied to SH7751R, there is a possibility of destroying SH7751R. Moreover, it leads to destruction of this product.

## 5. Boot Loader Specification

### 5.1. Boot Loader Functional List

The Boot Loader to start Linux is written on the FROM board bundled to this product. Table 5.1.1 shows the function to support by the boot loader. zImage used in this chapter indicates the Linux kernel image.

Table 5.1.1 Boot Loader Functional list

No	Command	Function	Note
1	h or ?	Command list display	
2	b	Program loading from CF card	
3	l	The message display about license	
4	w	The message display about Warranty(None)	
5	n	Load zImage from Ethernet	Channel:eth0
6	z	Program counter movement and execution zImage development ahead	
7	i	Board information display	
8	v	Boot loader version information display	

## 6. Linux Kernel Download

About Linux software, it is downloadable from the following URL etc.

<http://www.kernel.org/>

<http://www.linux-sh.org/cgi-bin/moin.cgi>

<http://mirror.sh-linux.org/rpm-index/index.html>

<http://www.m17n.org/linux-sh/>

<http://www.superh-linux.org/>



### CAUTION

Downloadable software is an open source and is not contained in the range of a guarantee.

The information about GPL refers to <http://www.gnu.org/copyleft/gpl.html>, and please uses it in the range of a user's responsibility.

---

SH7751R Evaluation Platform  
Outline  
R0P751RLC0011RL

Publication Date: July. 2006 Rev.1.00

Published by: Renesas Solutions Corp.  
System Buisness Division

Edited by: Renesas Solutions Corp.  
System Buisness Division

---

© 2006. Renesas Technology Corp. and Renesas Solutions Corp., All rights

R0P751RLC0011RL  
Outline



Renesas Electronics Corporation

1753, Shimonumabe, Nakahara-ku, Kawasaki-shi, Kanagawa 211-8668 Japan

REJ10J1470-0100